 
 
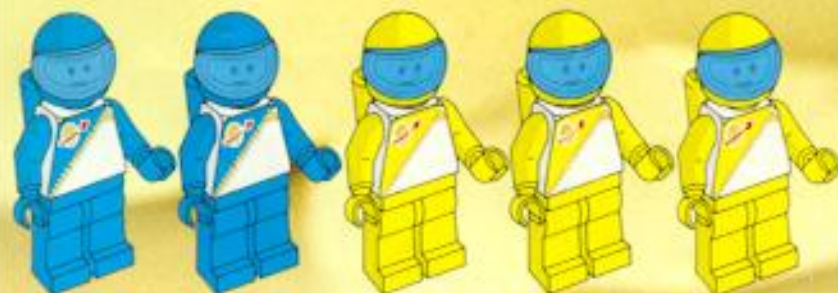 
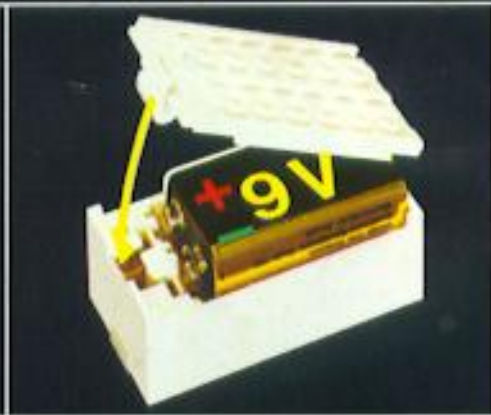 


6990
LEGOLAND®

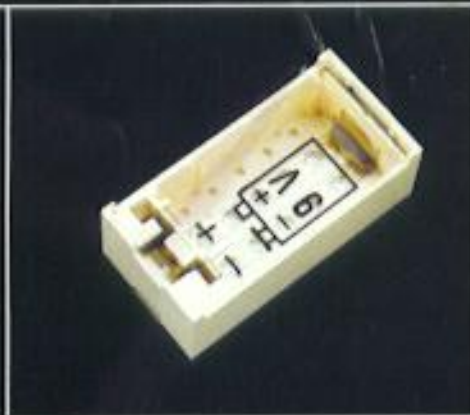

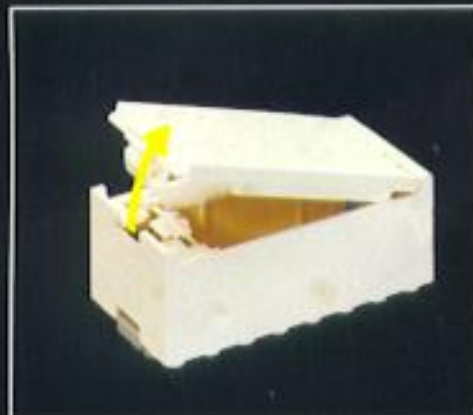

USE OF BATTERY BOX — PLEASE NOTE

Please obey the following points concerning the proper use of the battery box:

DO:

- Use a 9 volt battery and follow instructions carefully.
- Check the battery regularly.
- Observe polarity signs in the bottom of the battery box.
- Remove the battery from the battery box if unused for a long period.
- Use an alkaline or rechargeable battery for longer life.

DON'T

 
- Recharge the battery while it is in the battery box.
- Connect the battery box to other sources of power (eg. transformers, outlets, or other battery boxes).
- Throw used batteries in the fire.




1




2

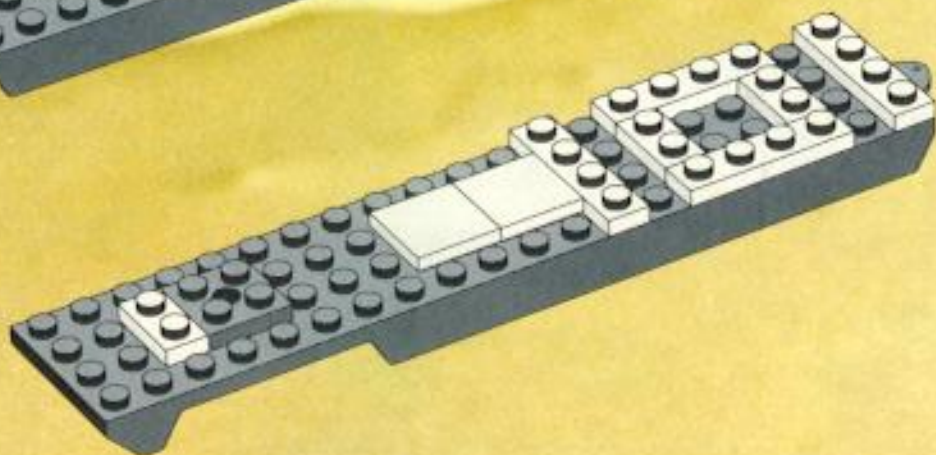


3

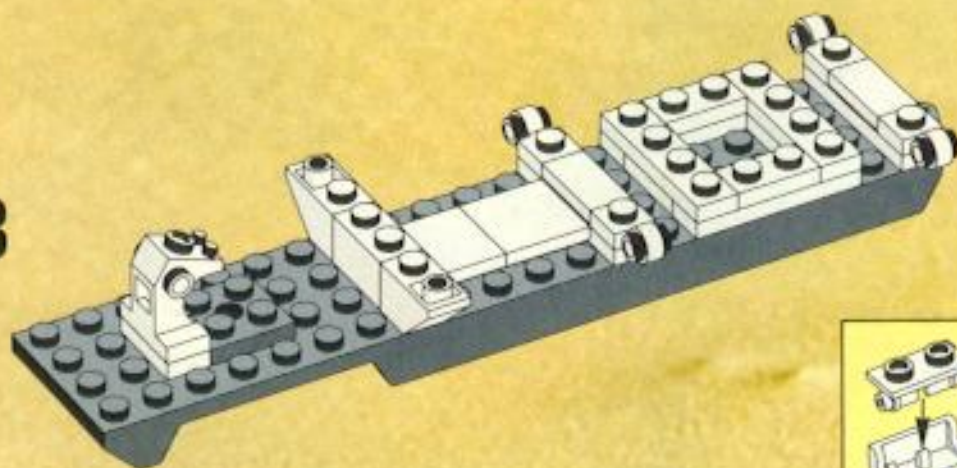 


4

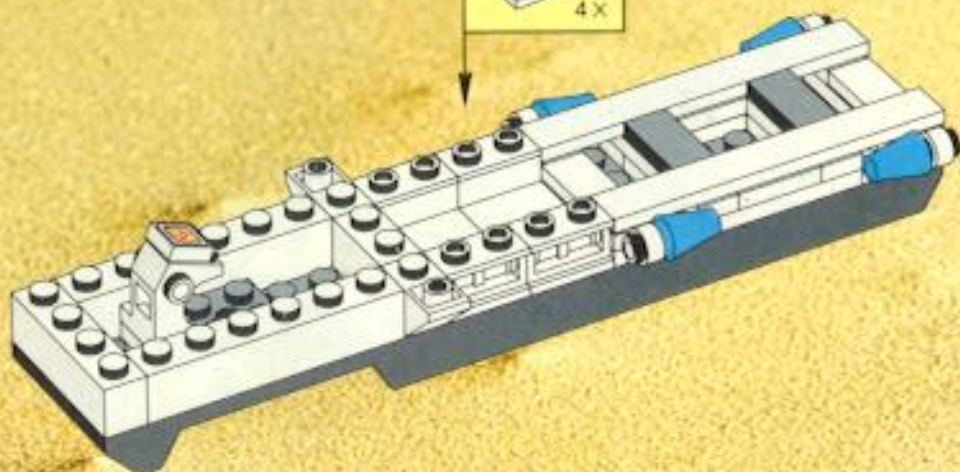 

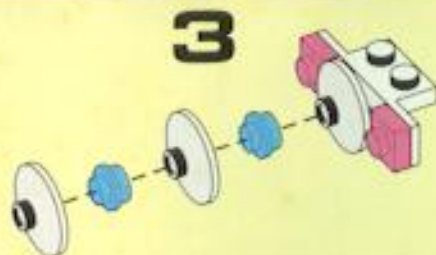 


5

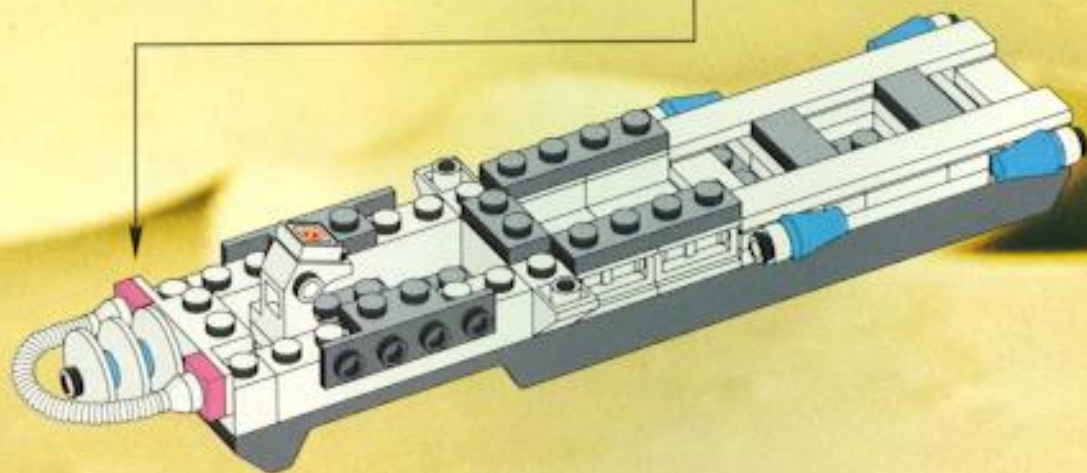 


2x


 
6

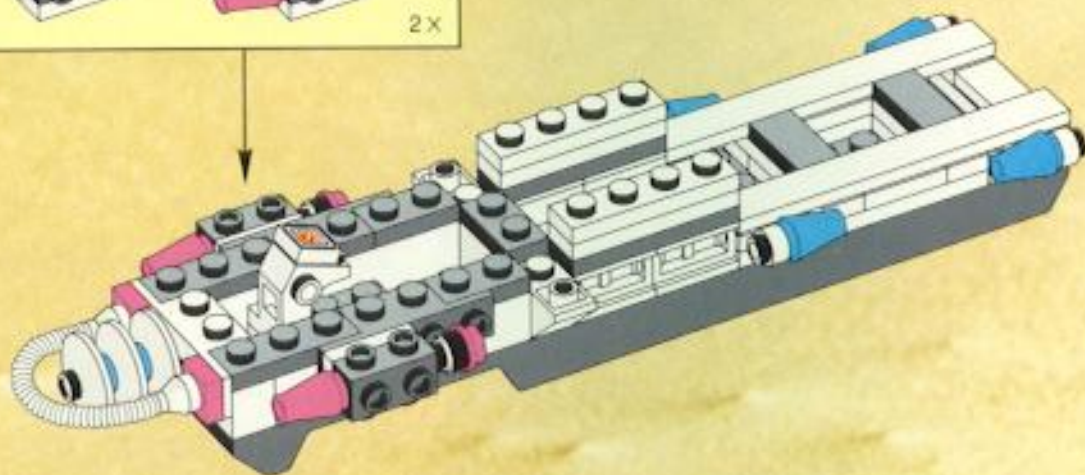


7

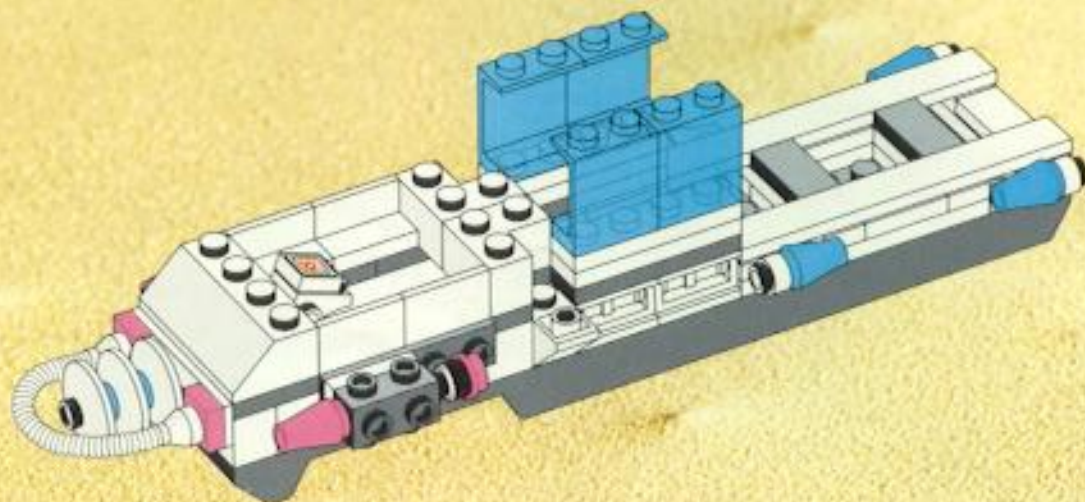 

8

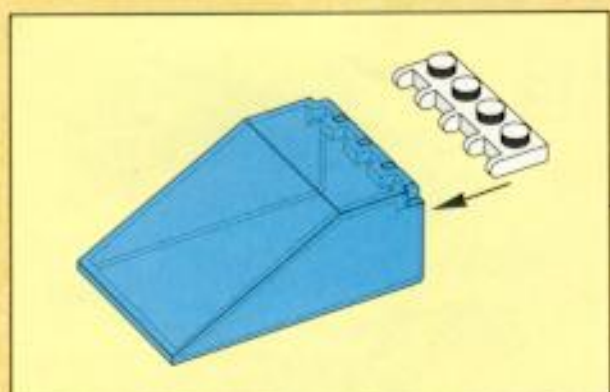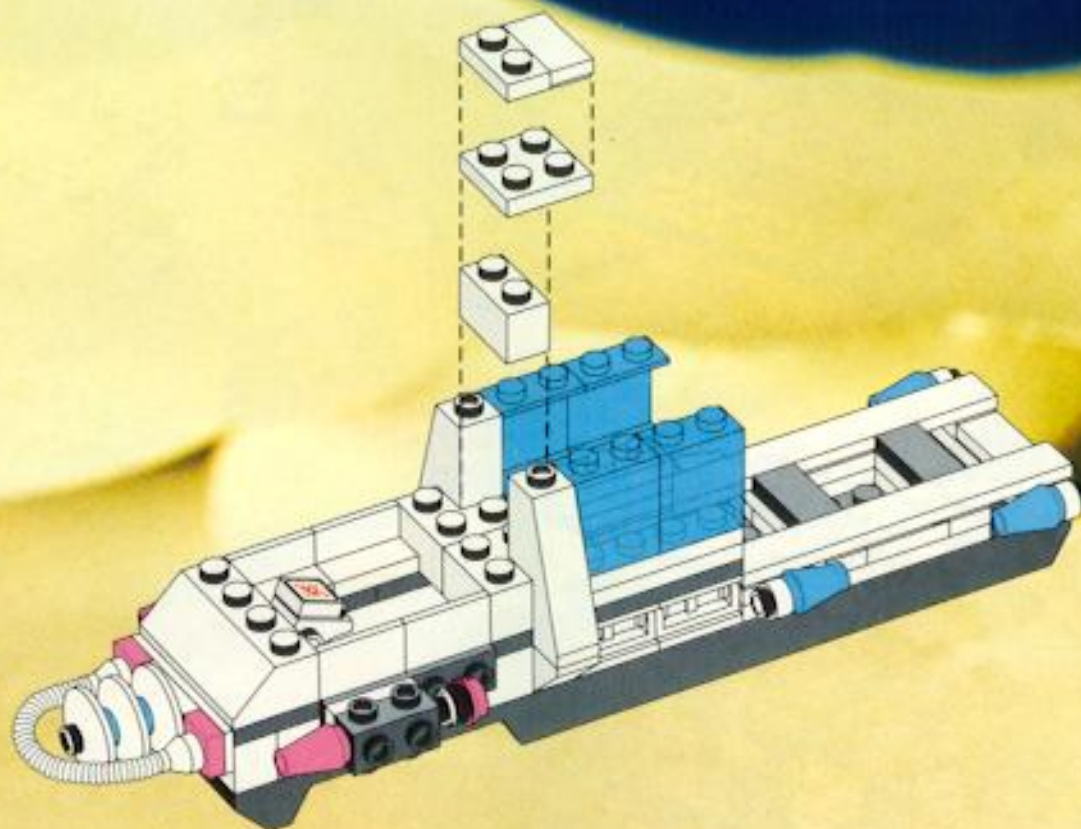  


9

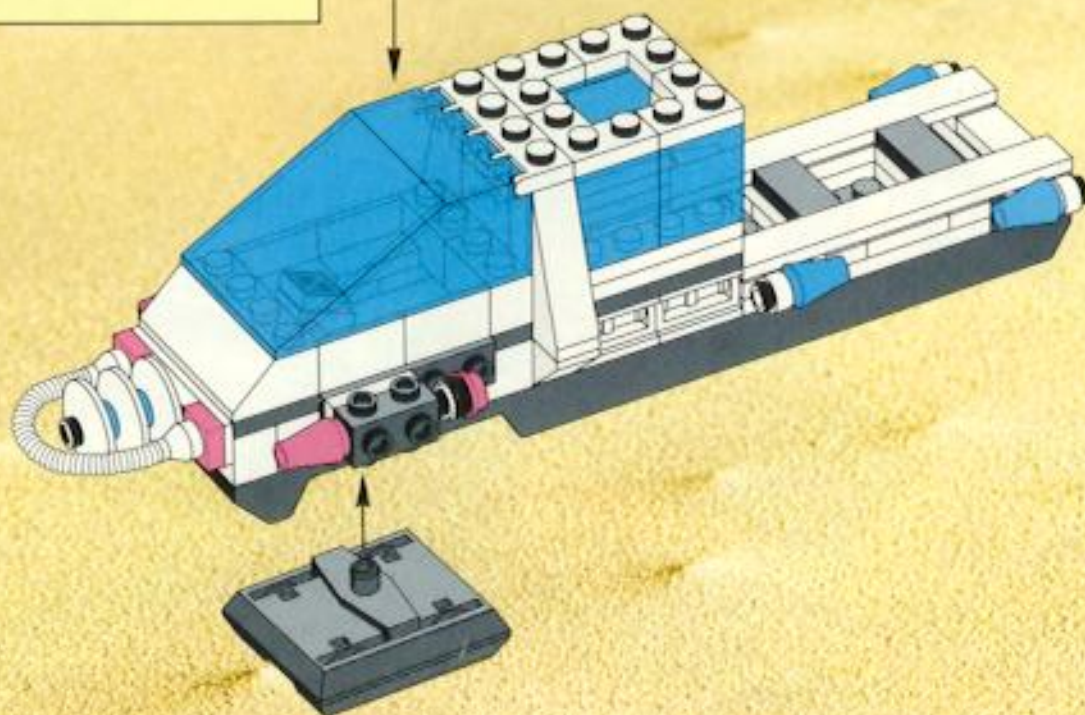 


1



 
2

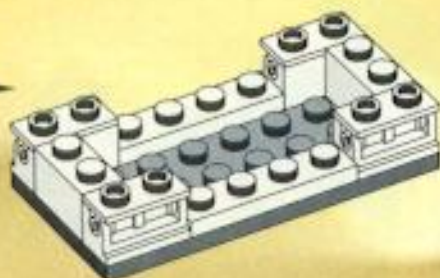

3

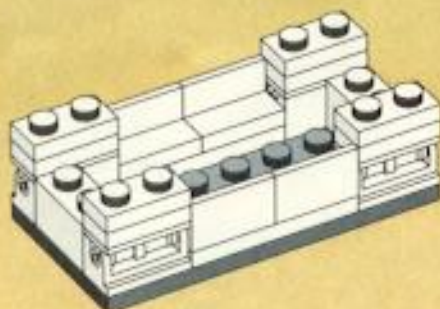 

4

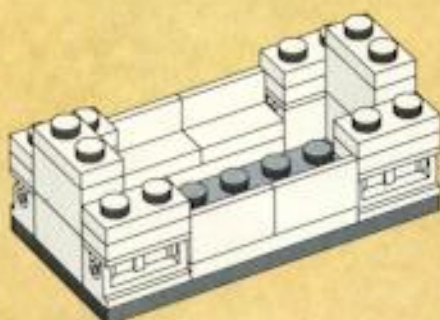 


5



6



 
7

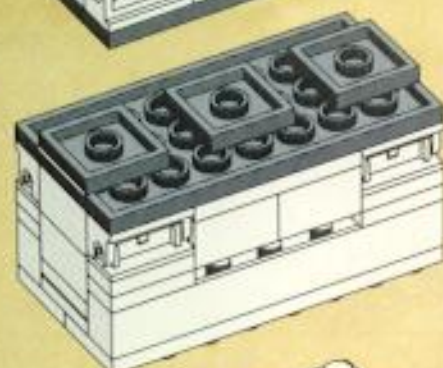


8



 
10

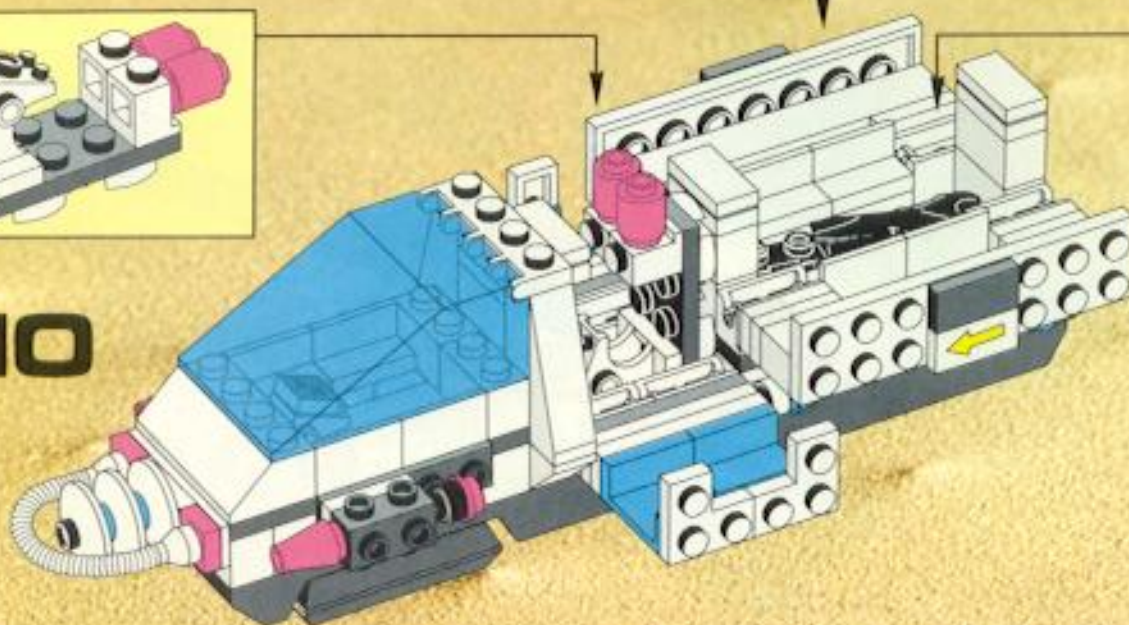


11



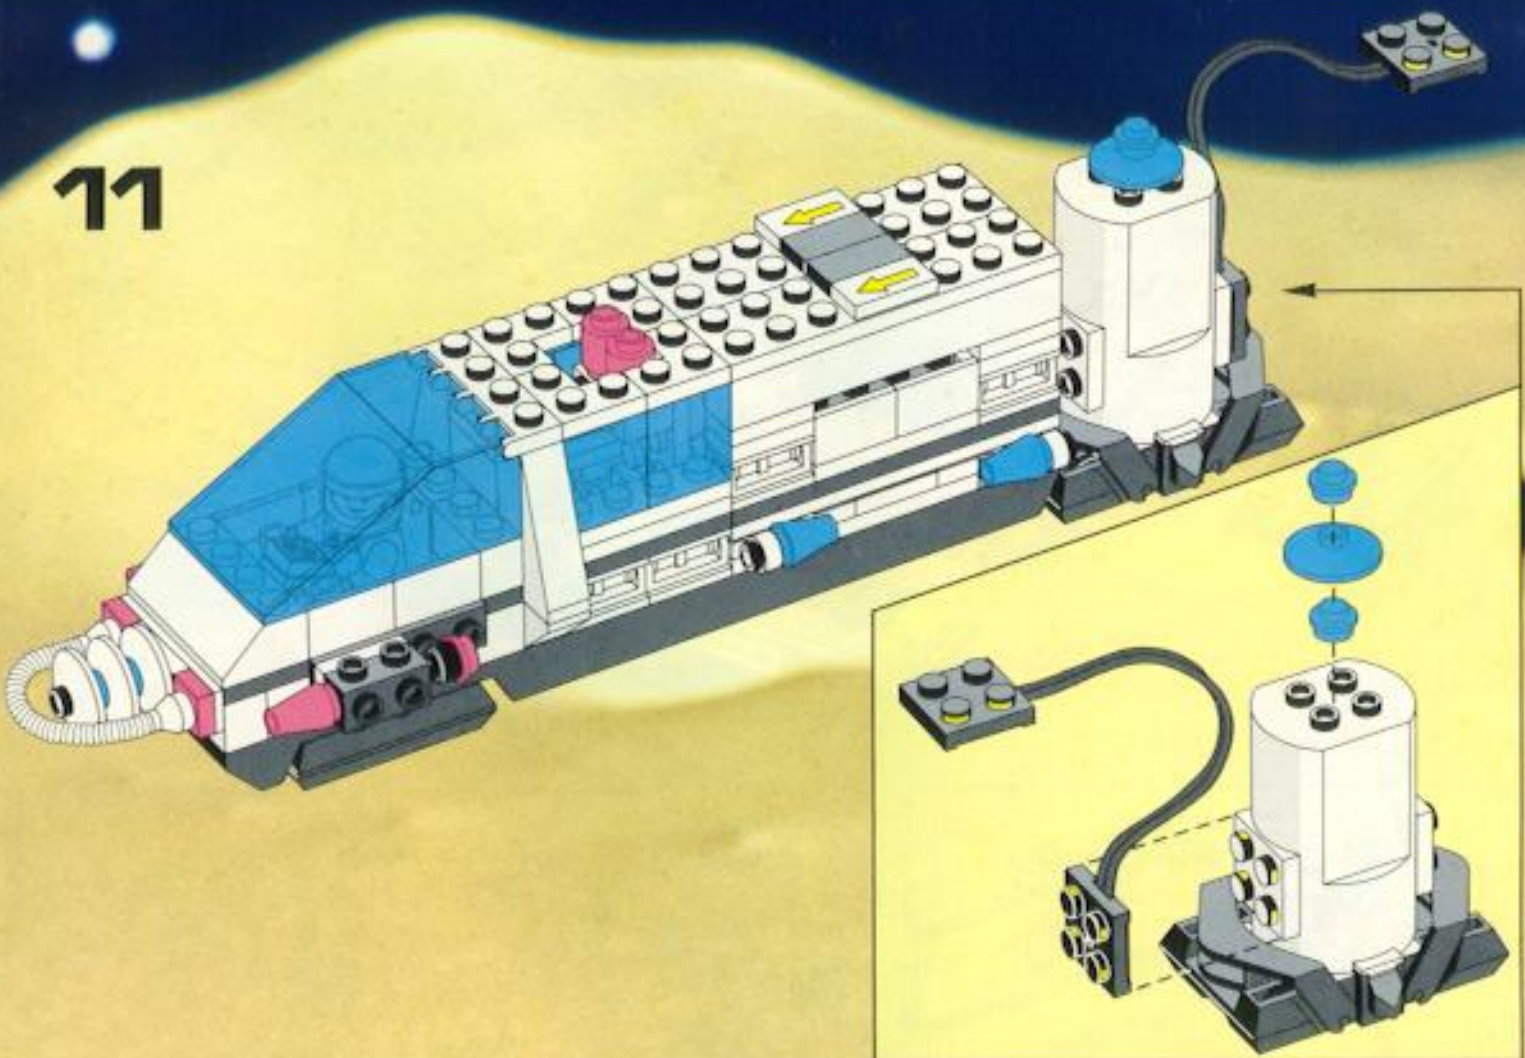 


1

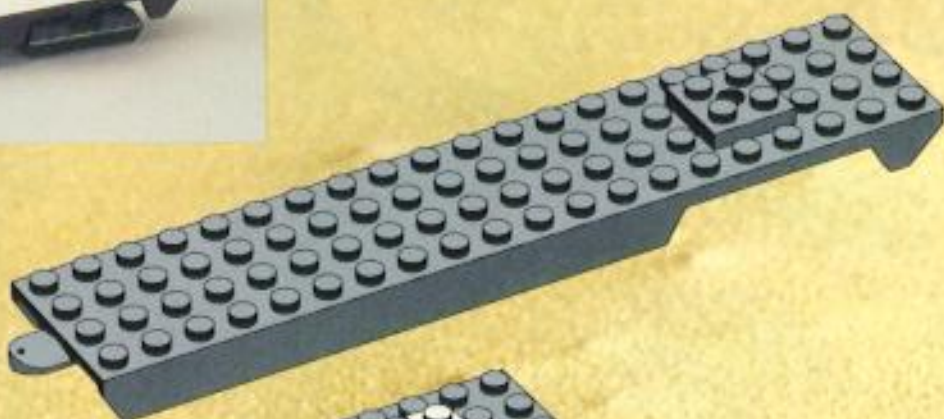 


2

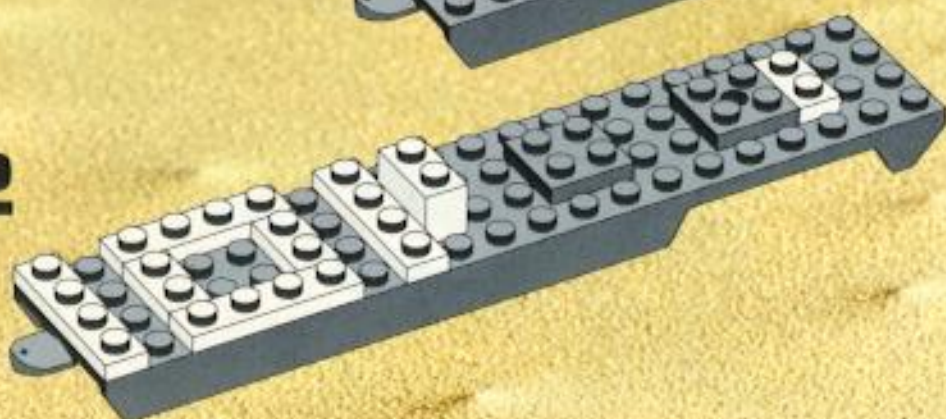 


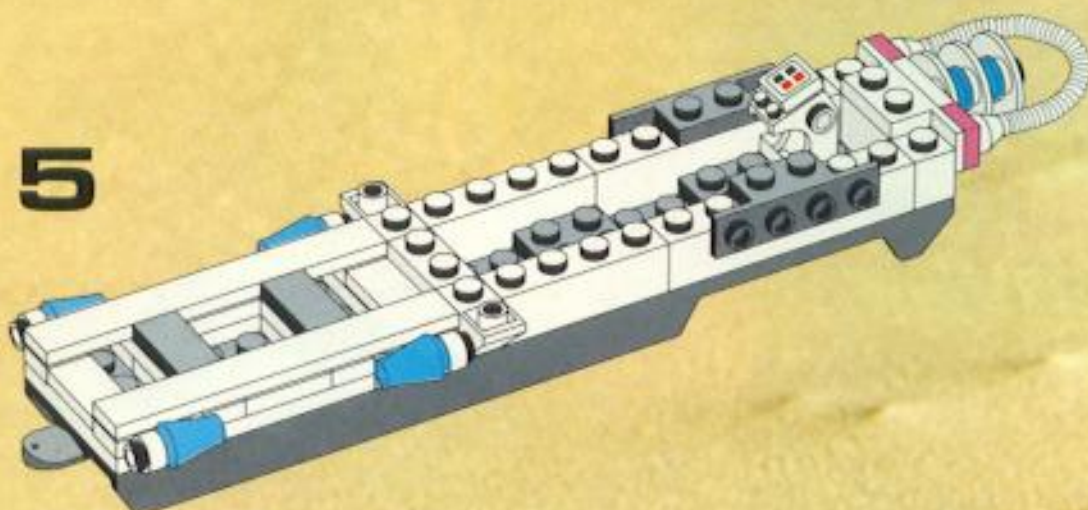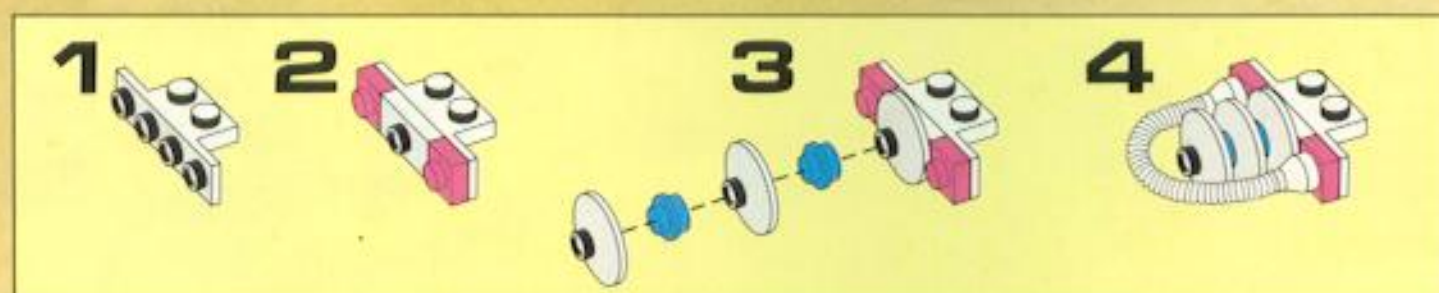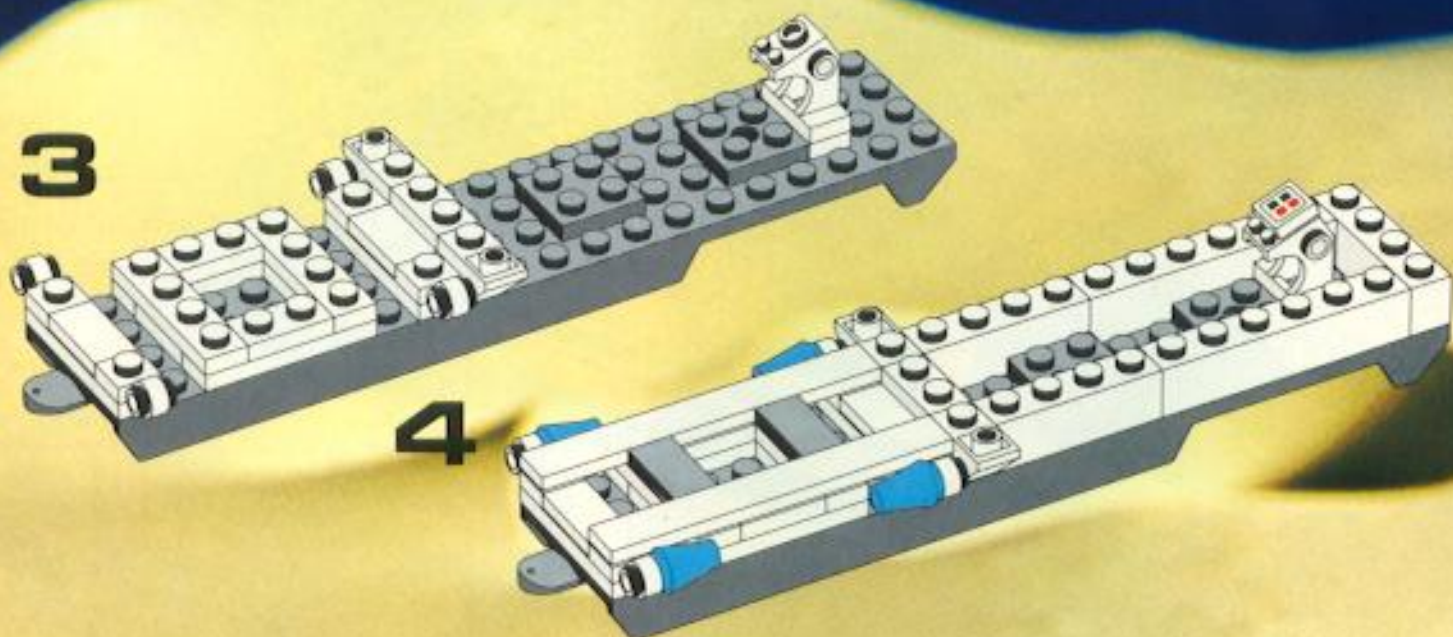   



6

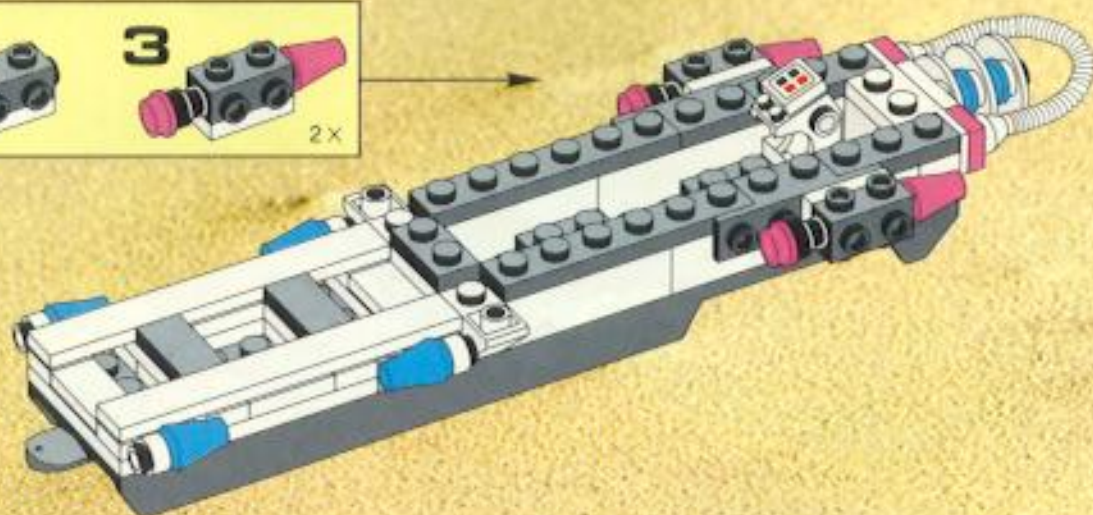 


7

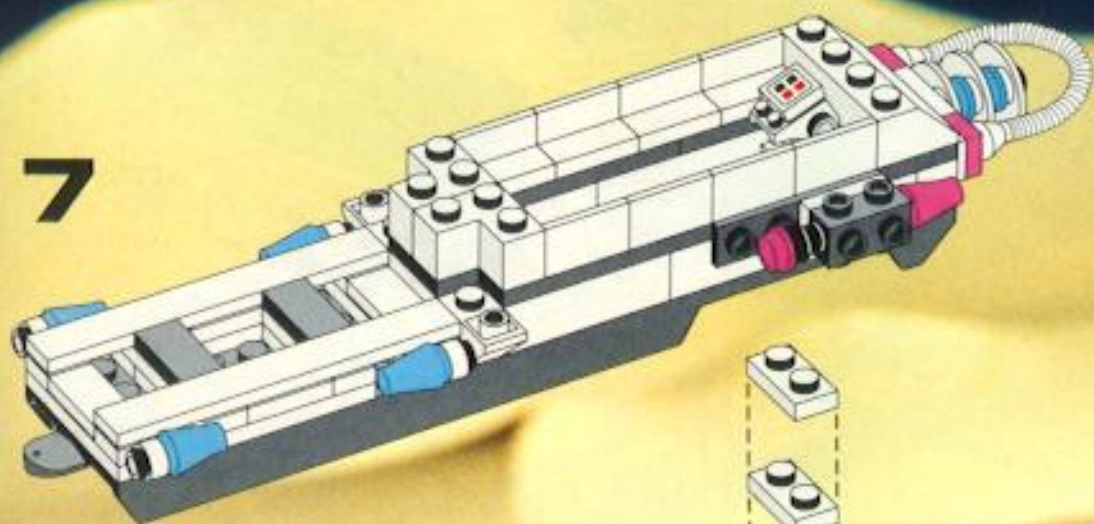 

8

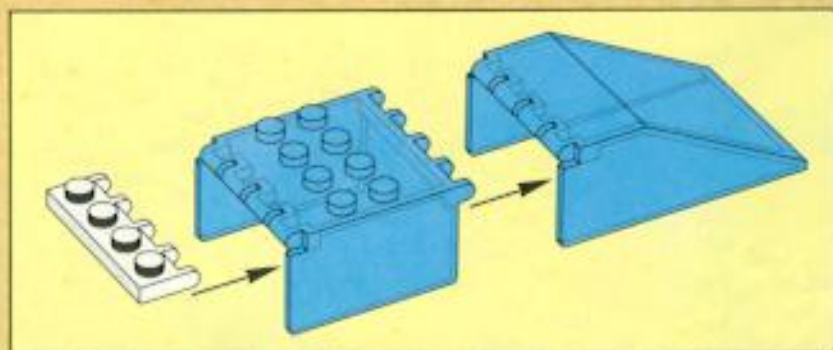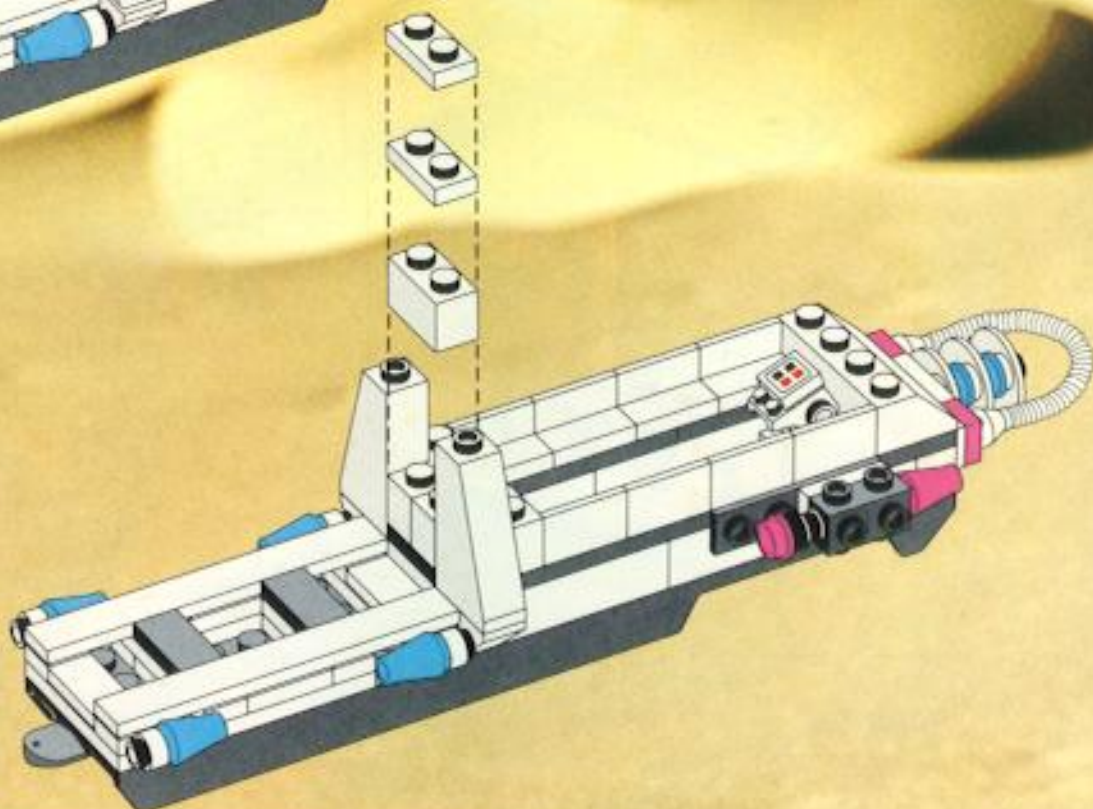  

9

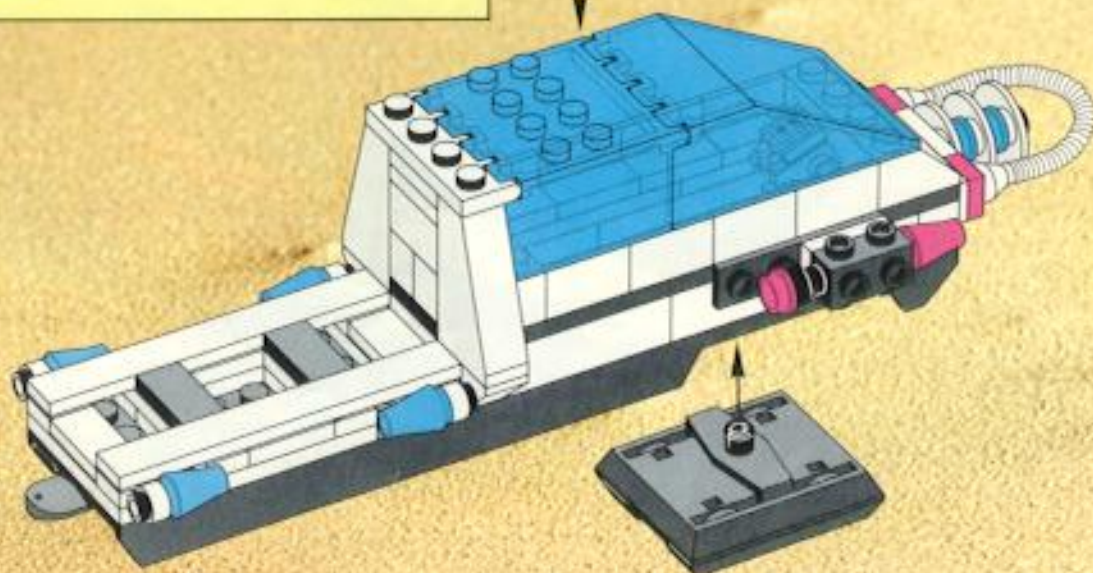 


1





2




 
3

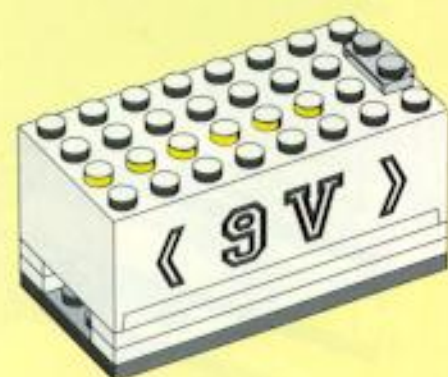




4

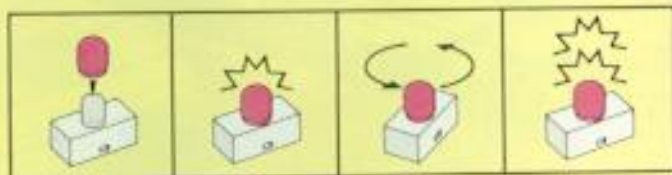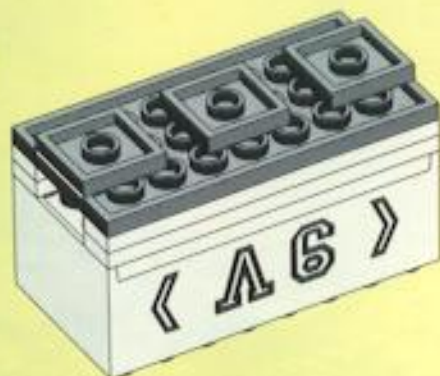  

5

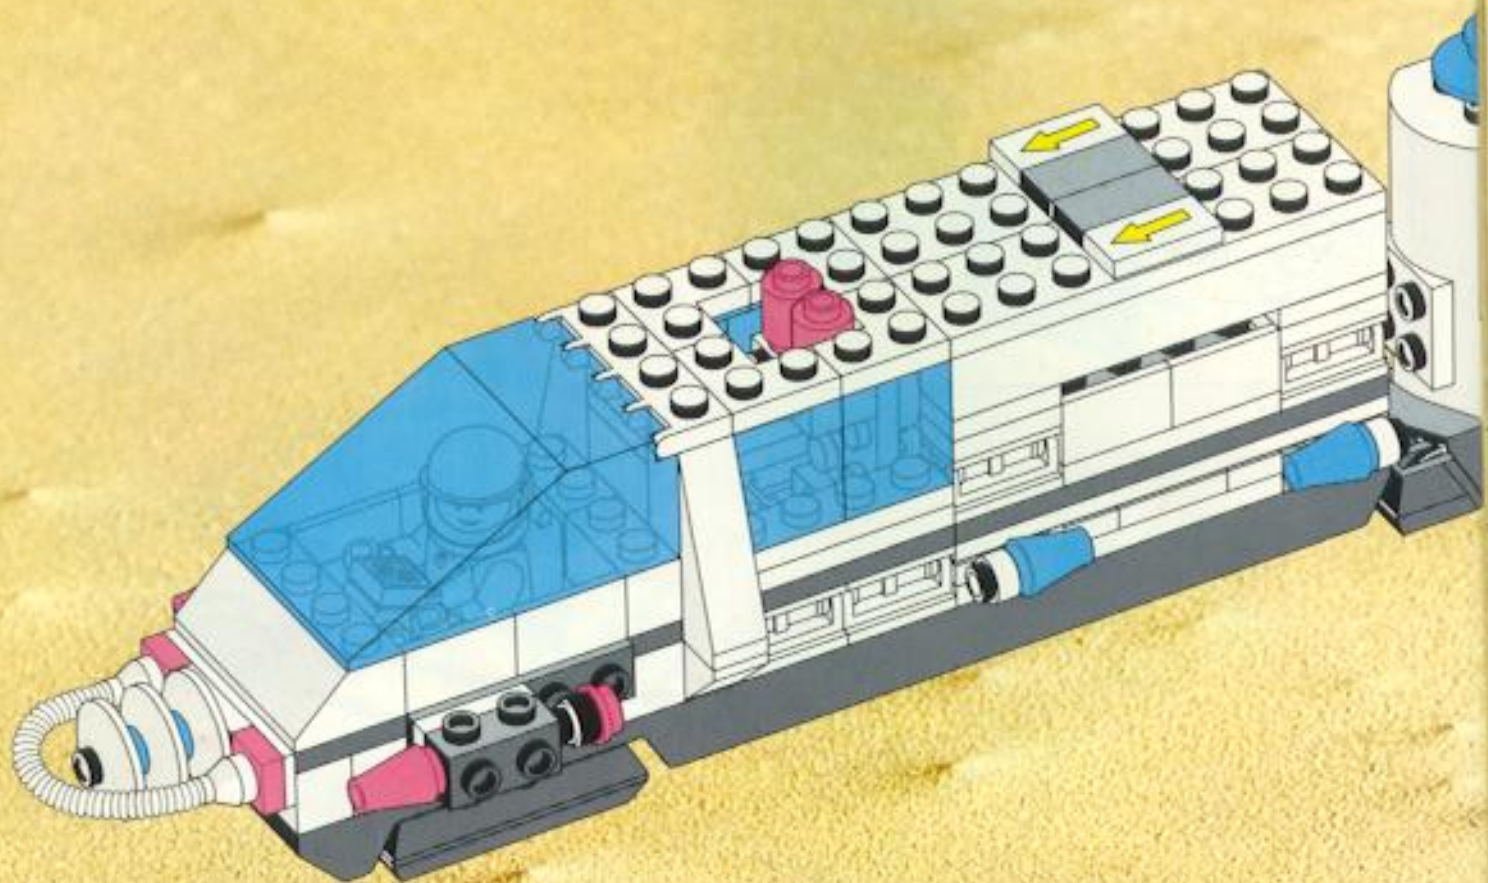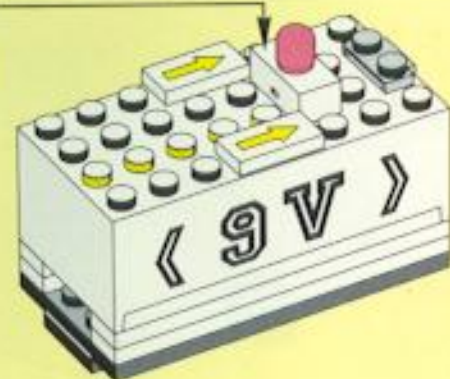  


10

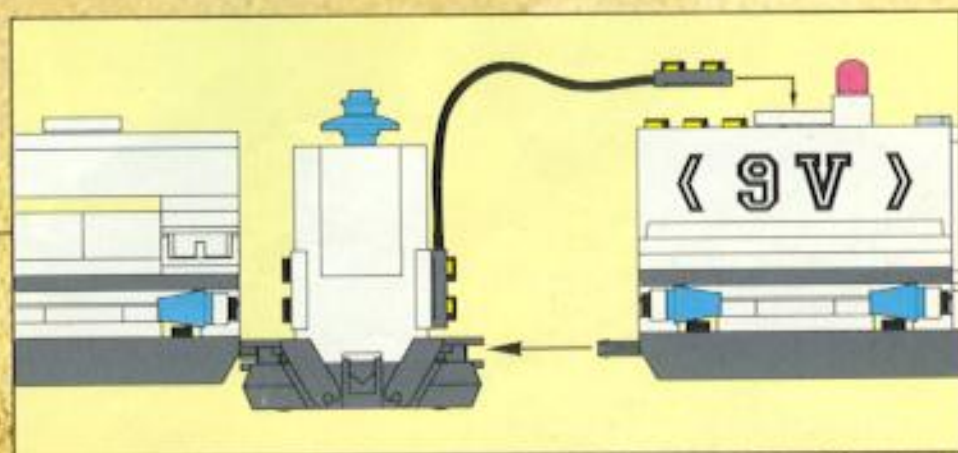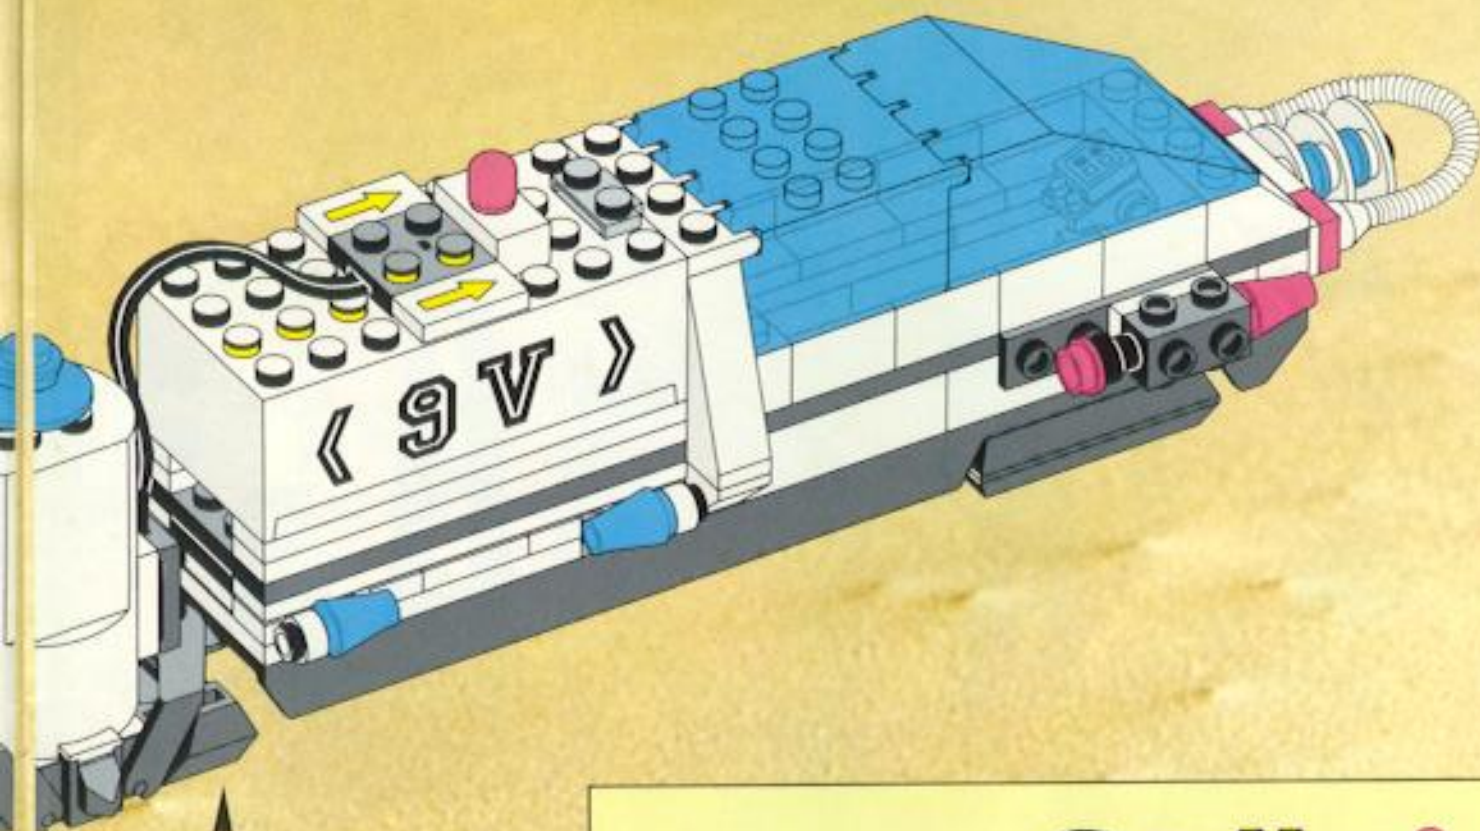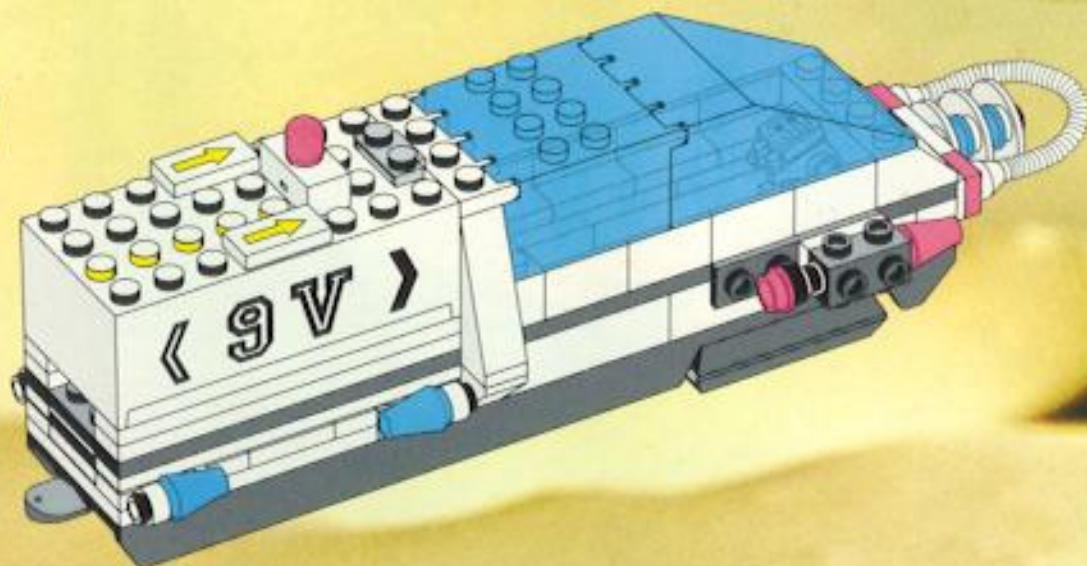   




1

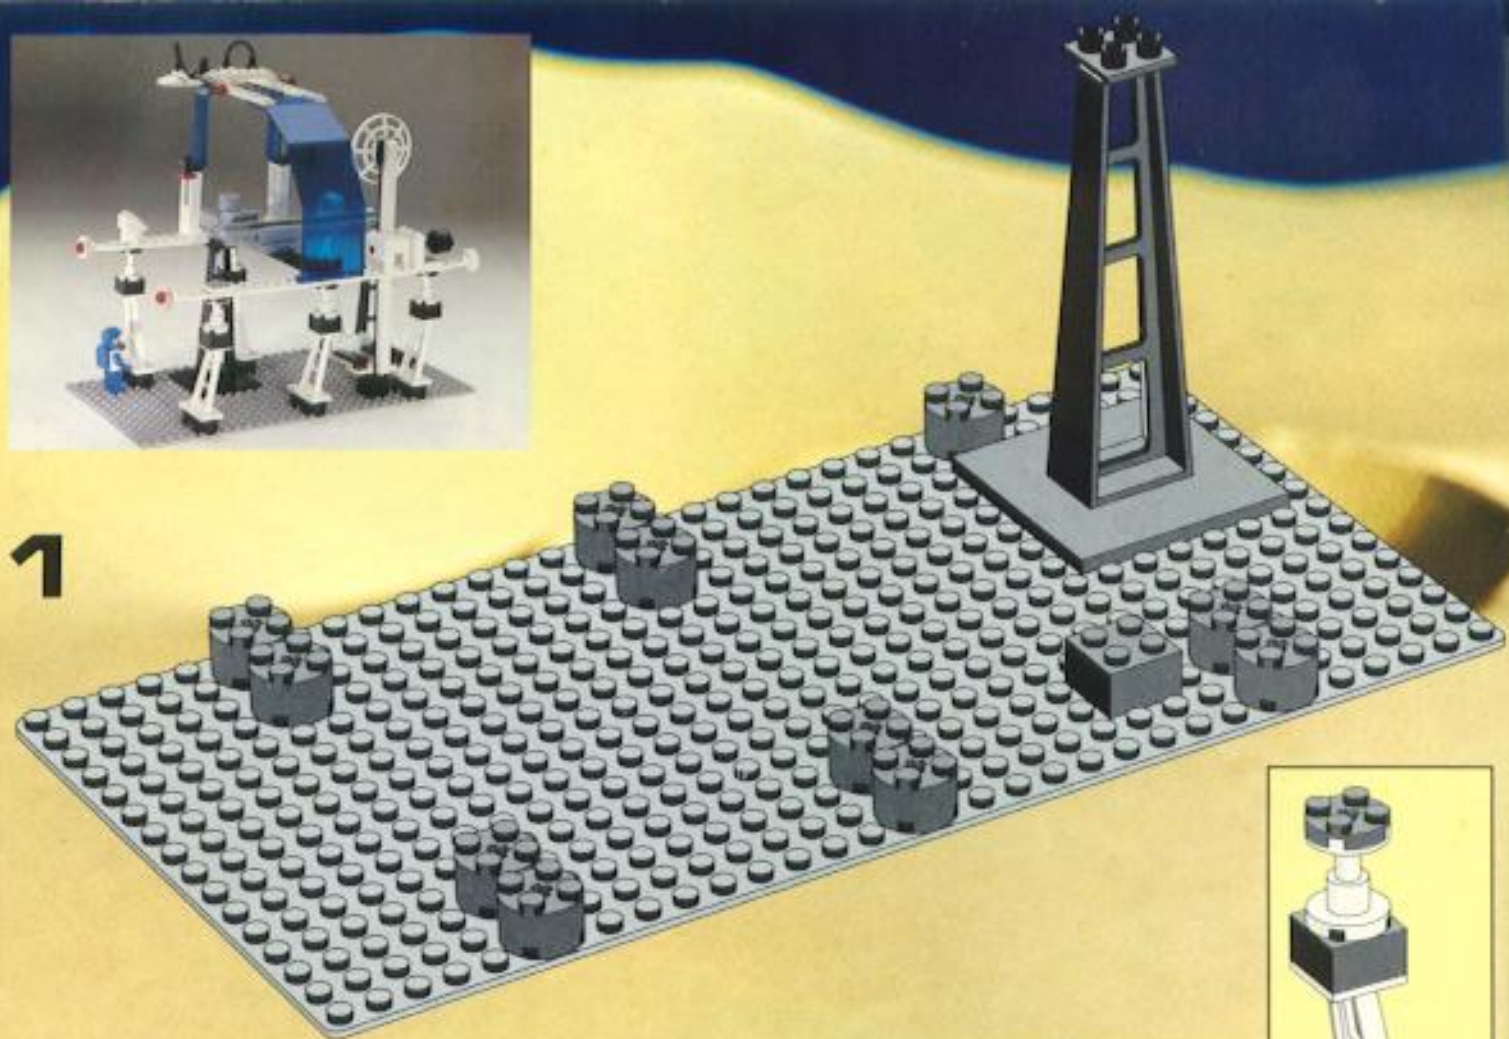 


2




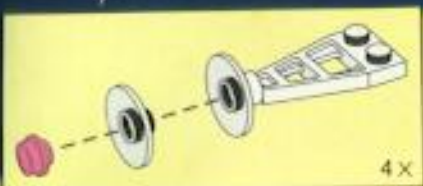 


3

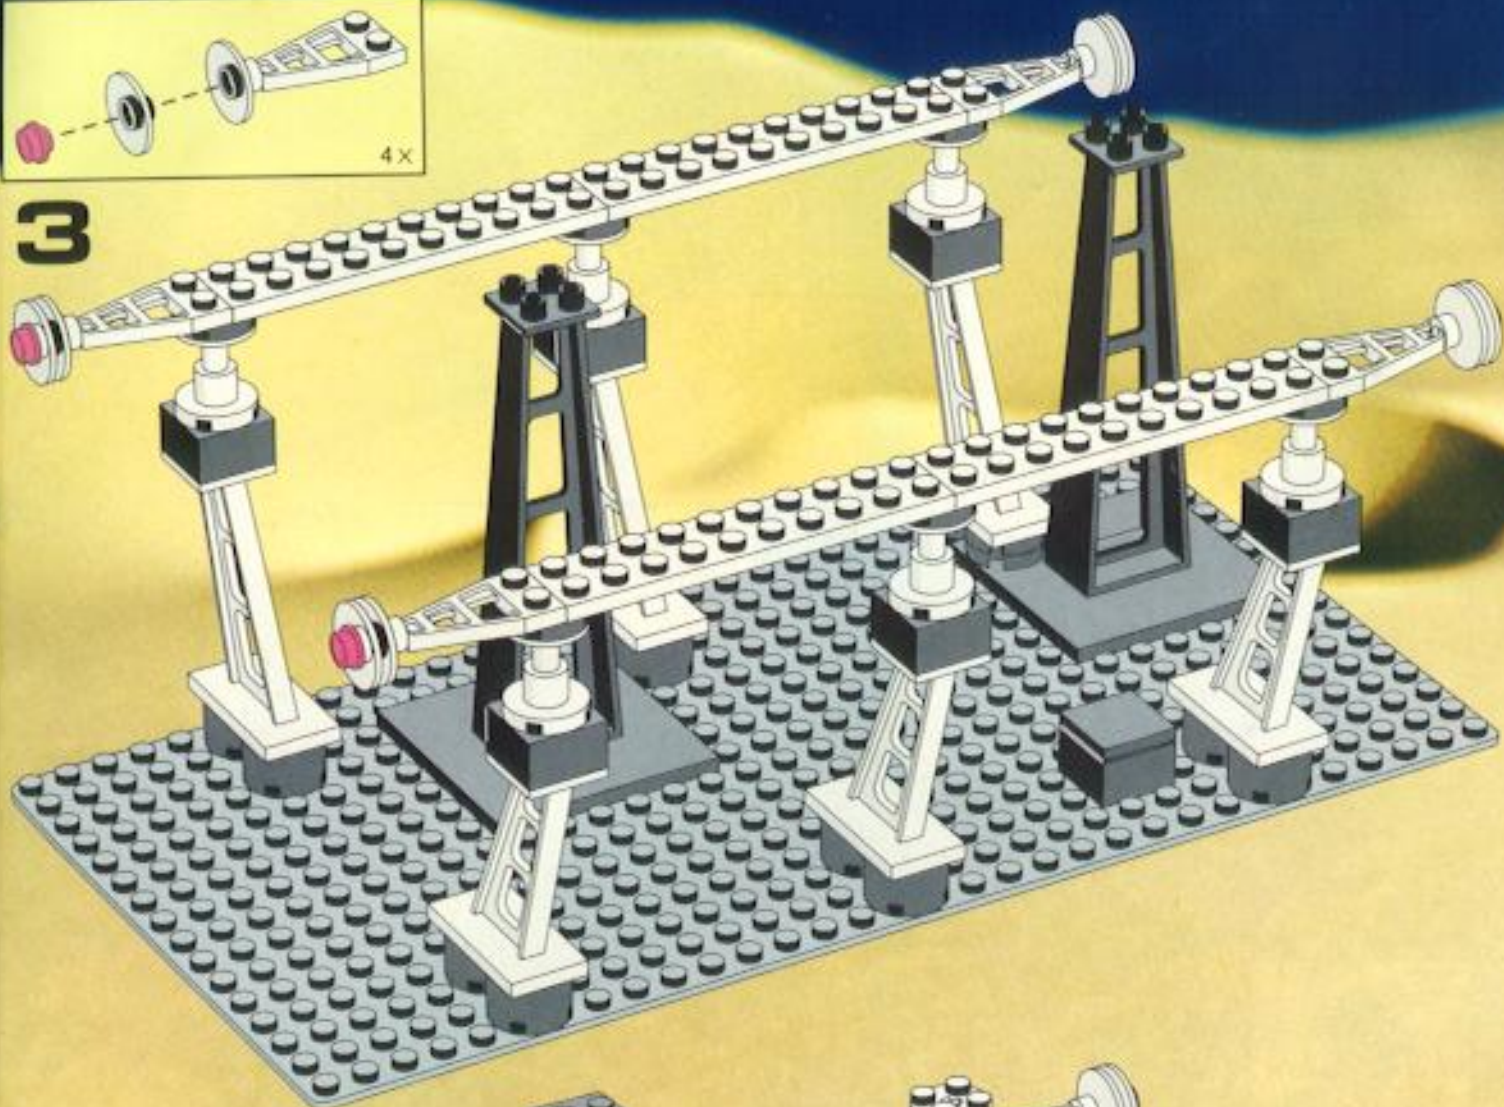 






4

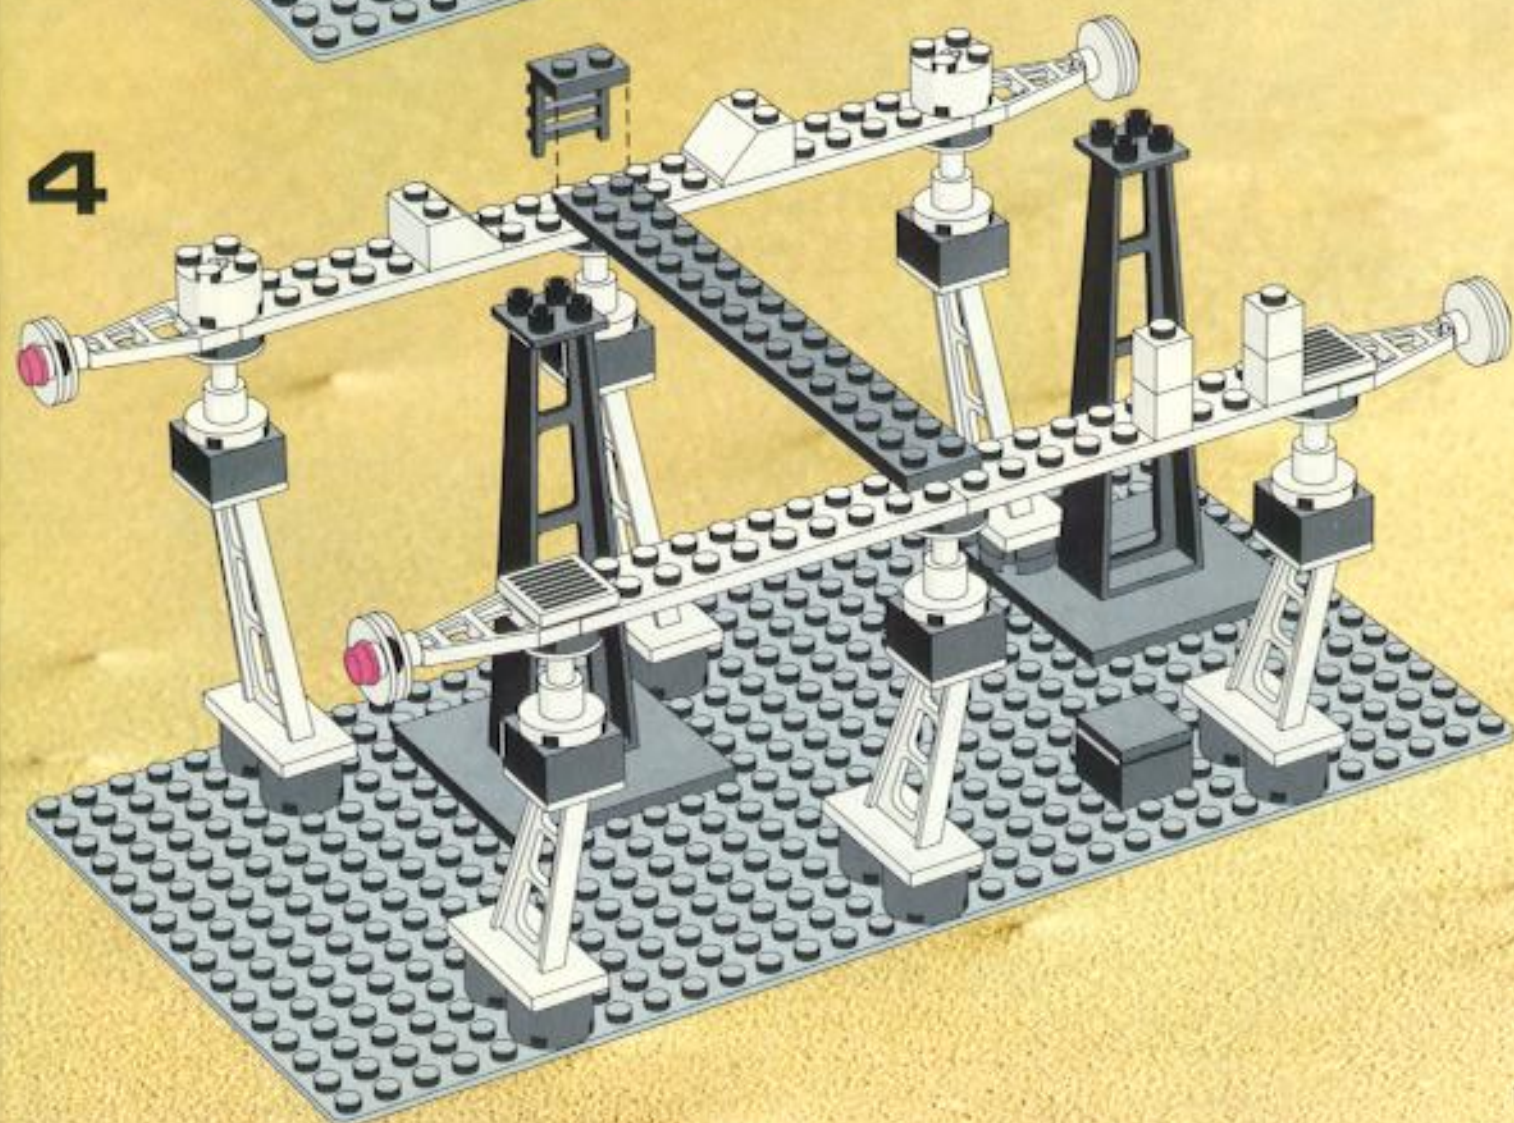 


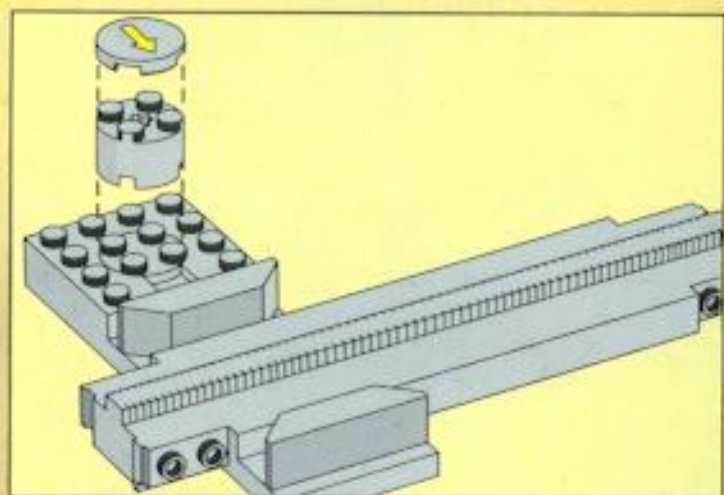 


5

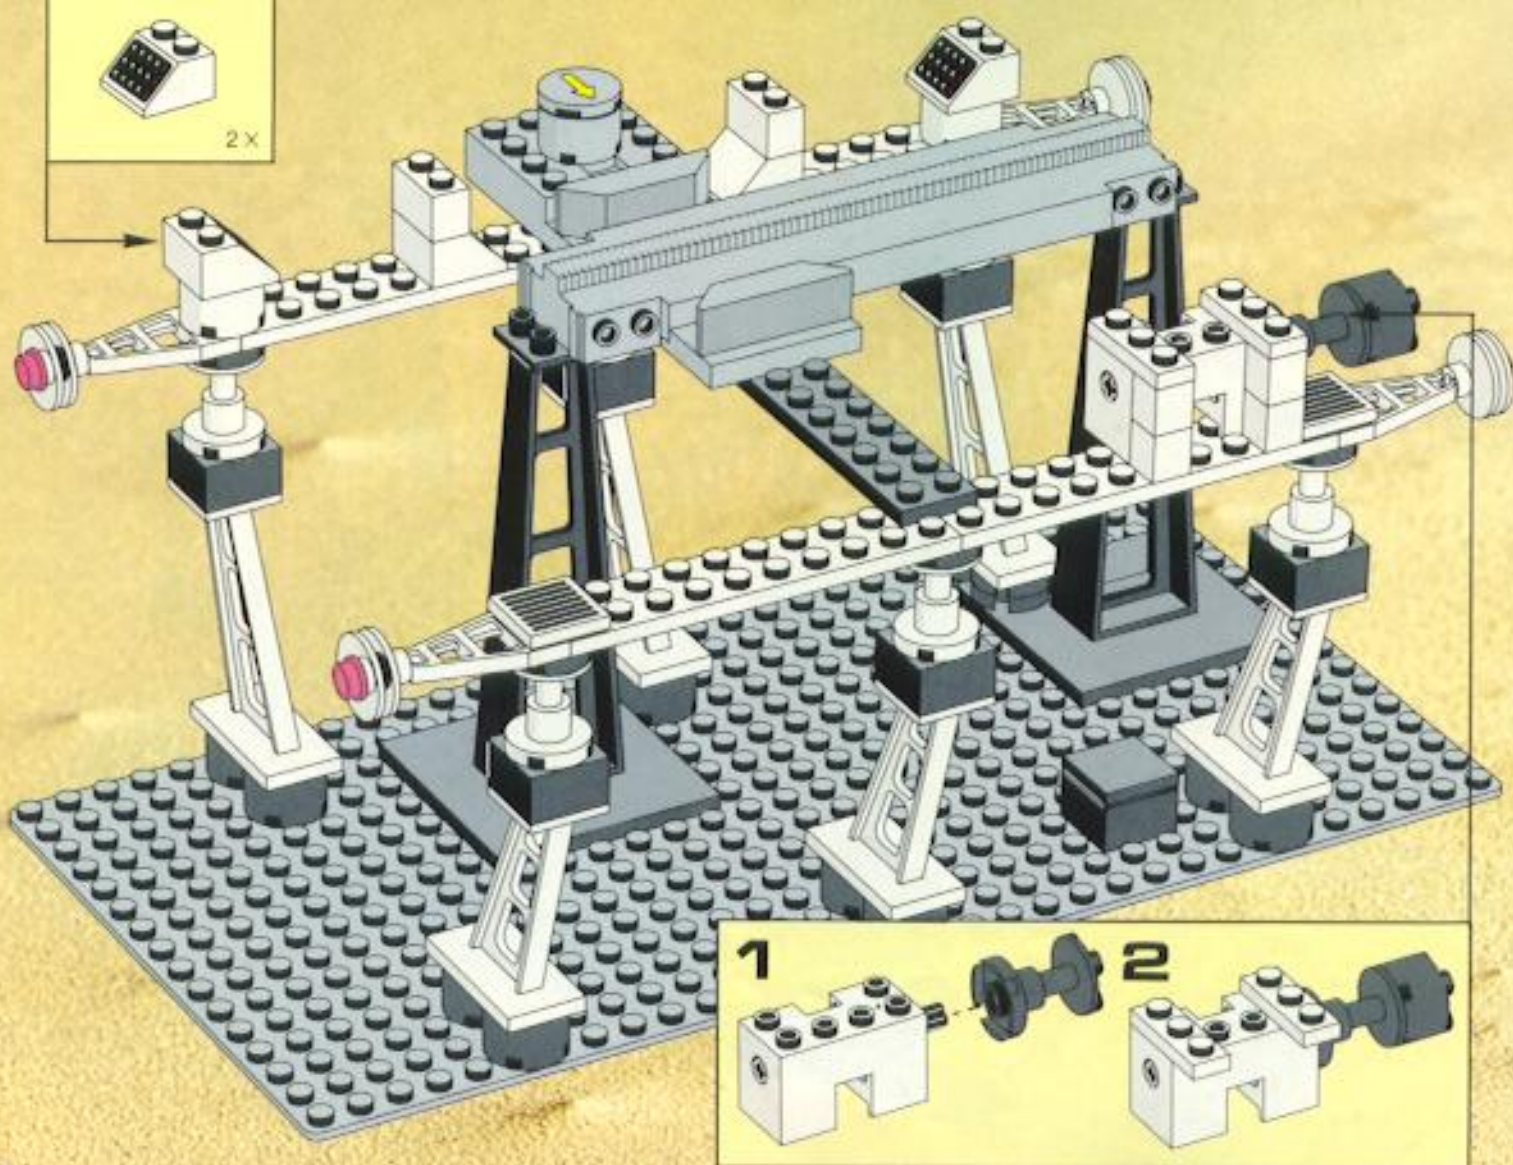 


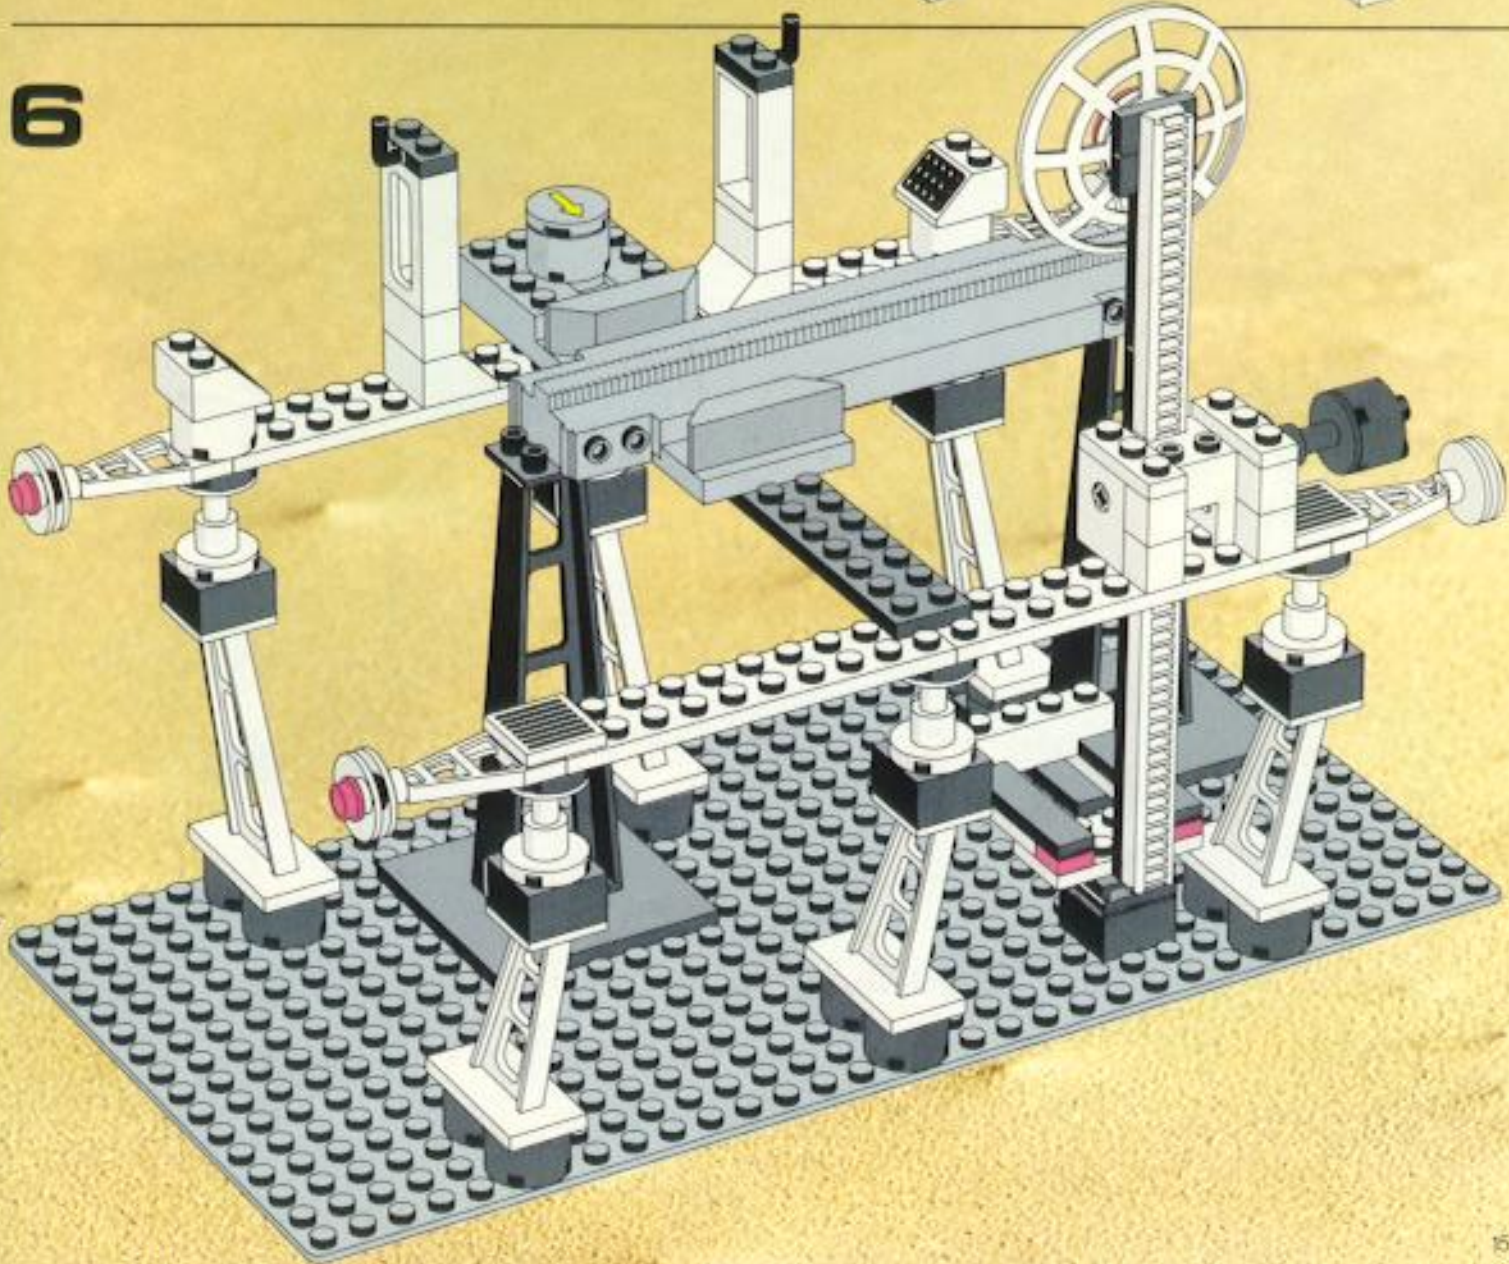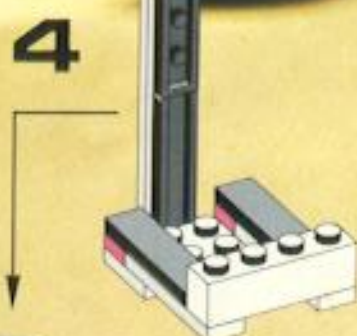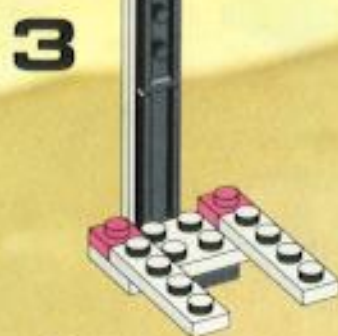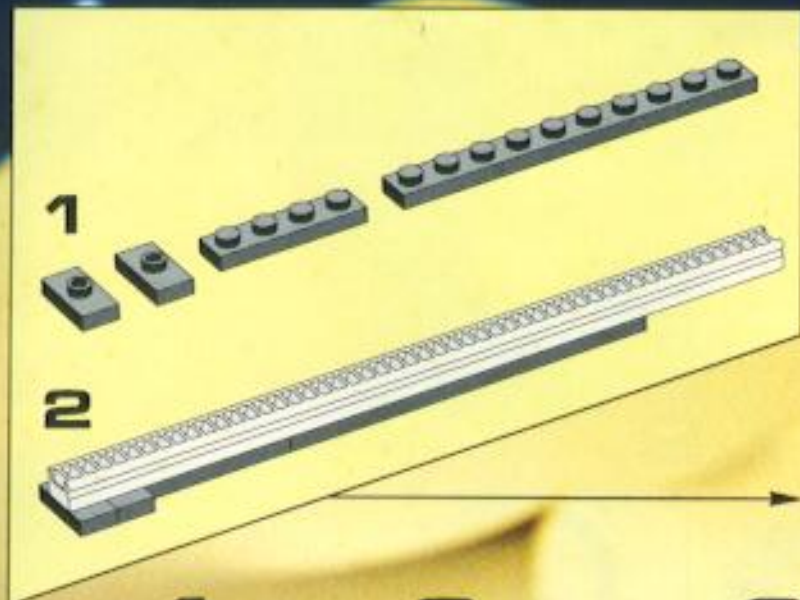    

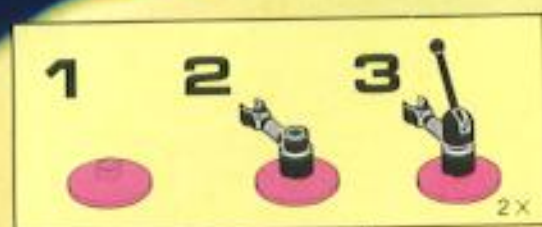 



7

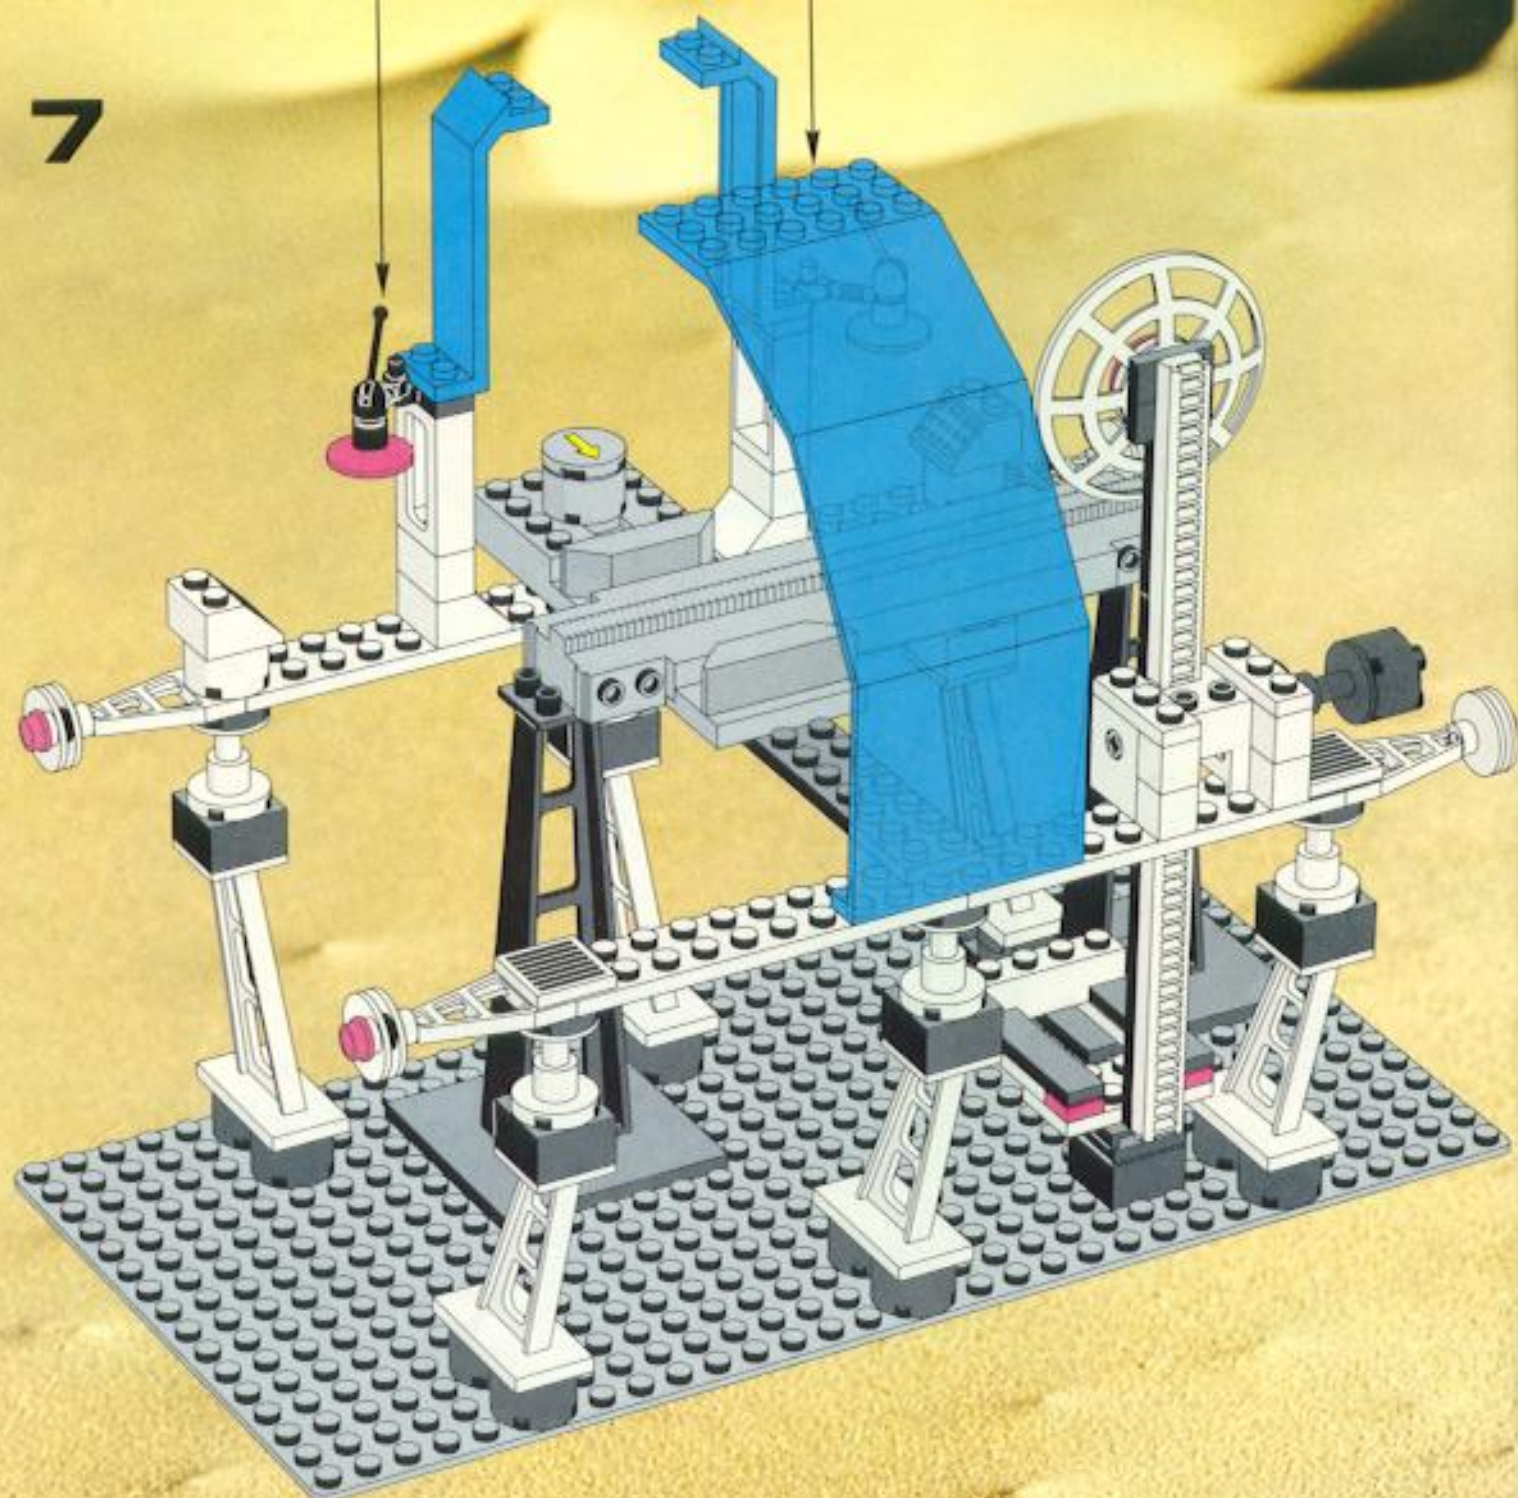 

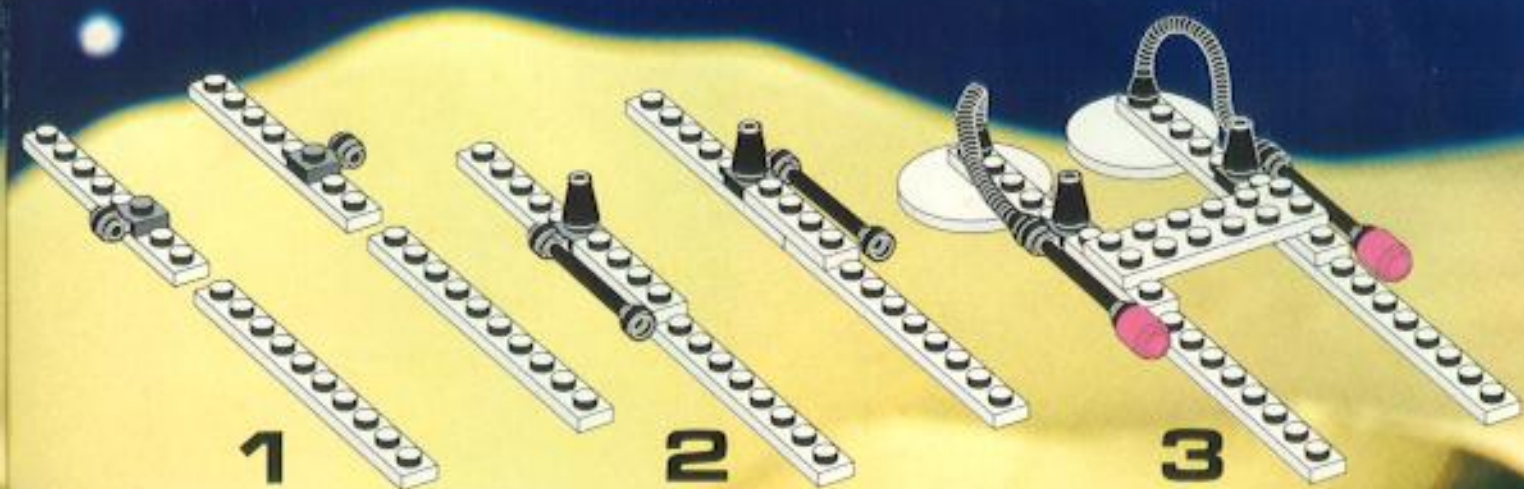 


8

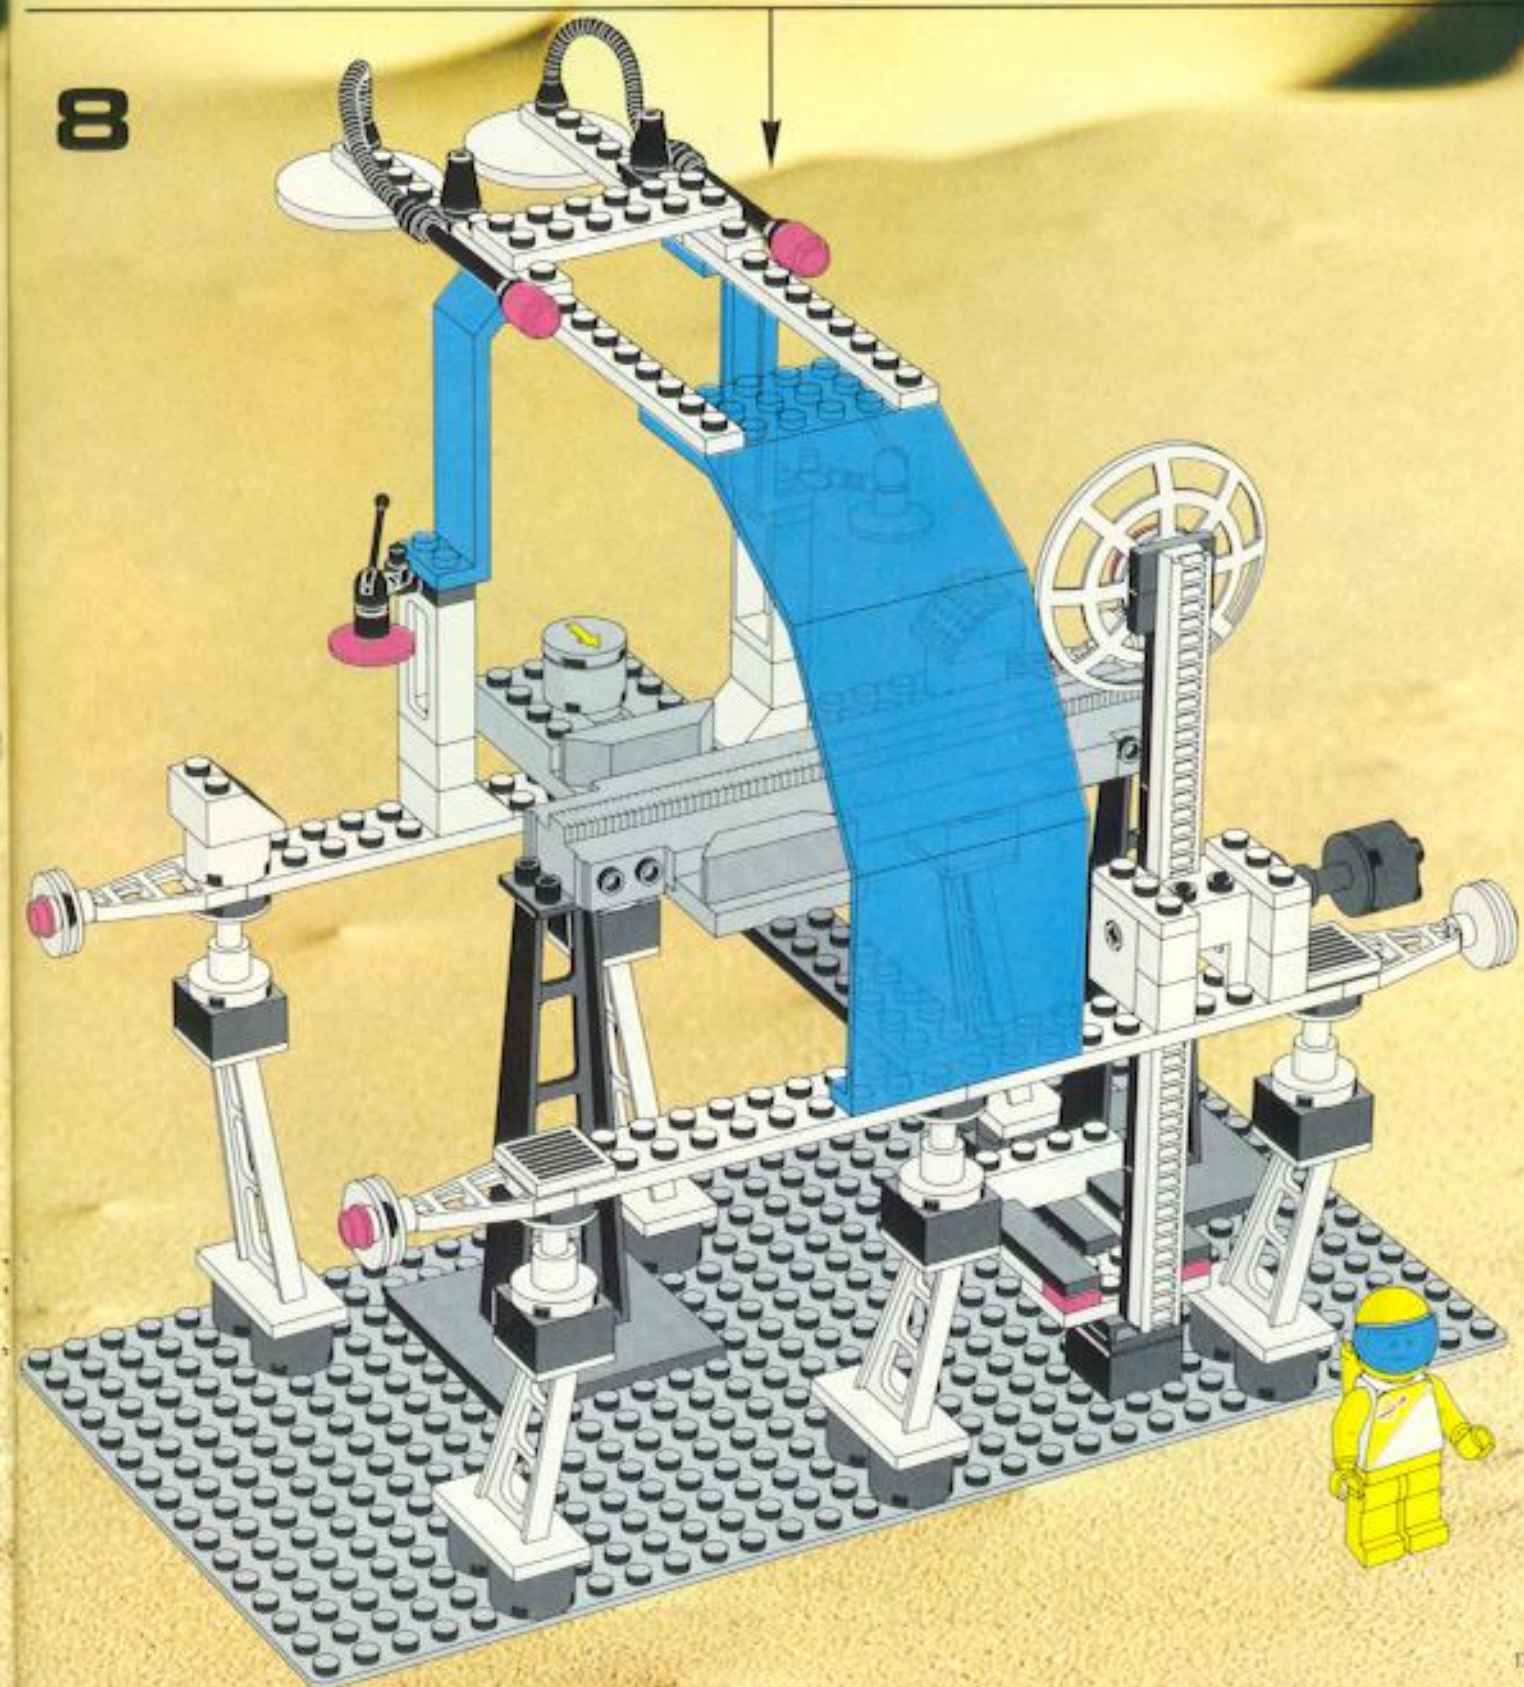 


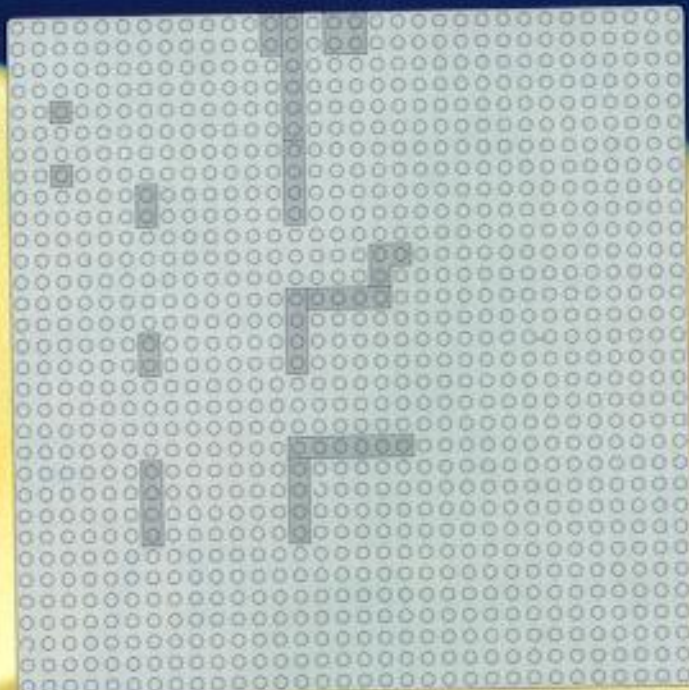 


1

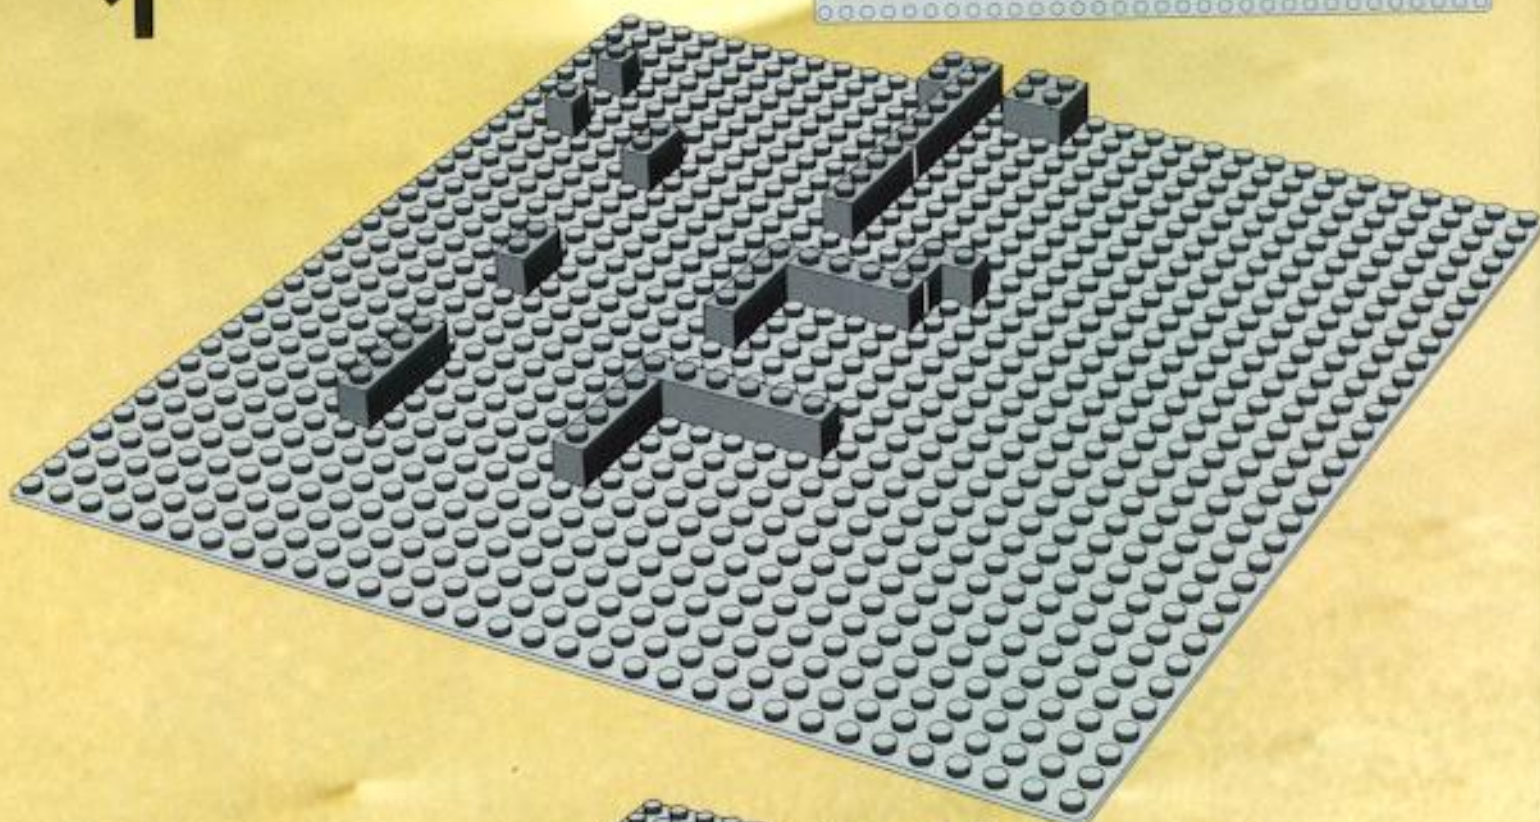 

2

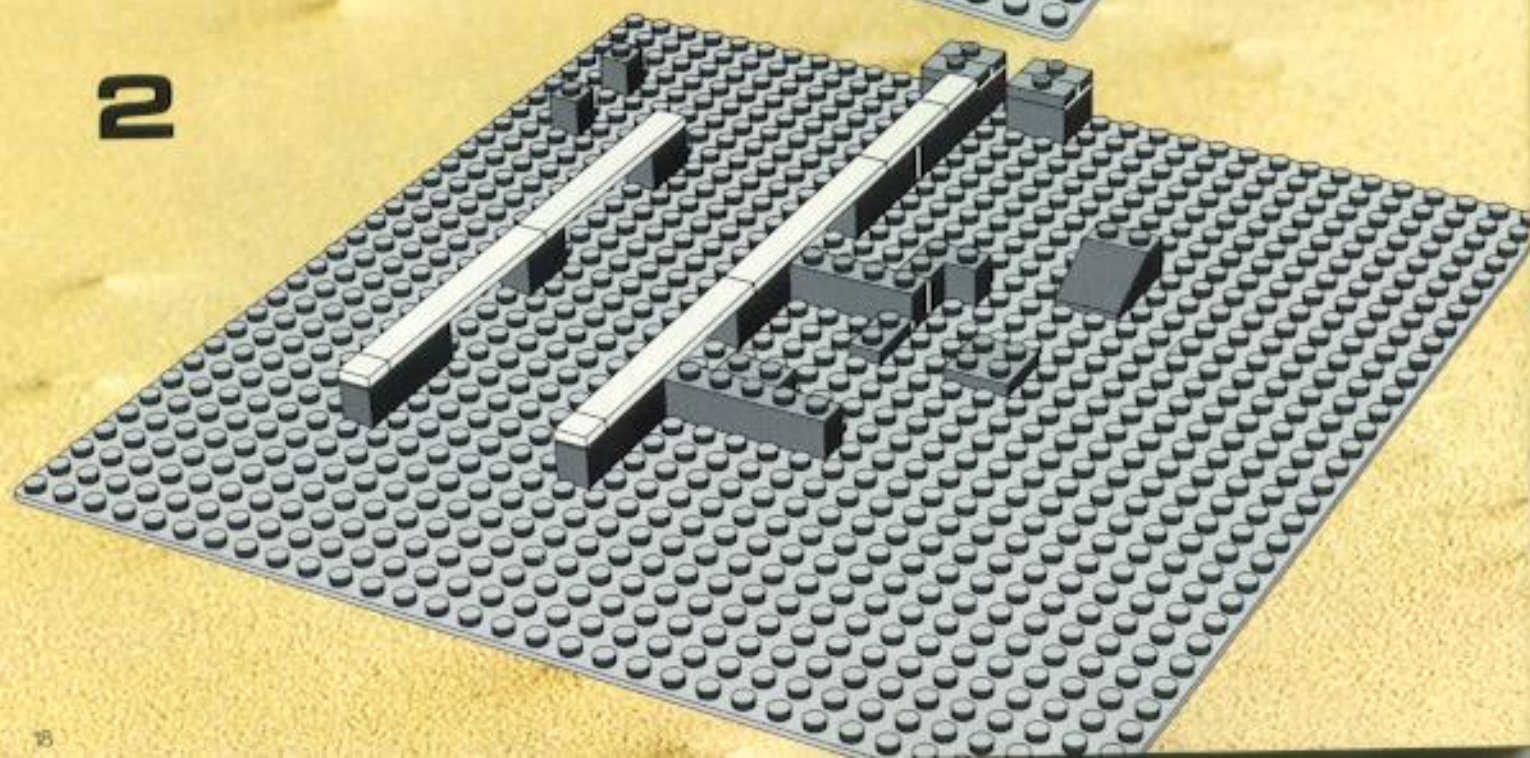 

3

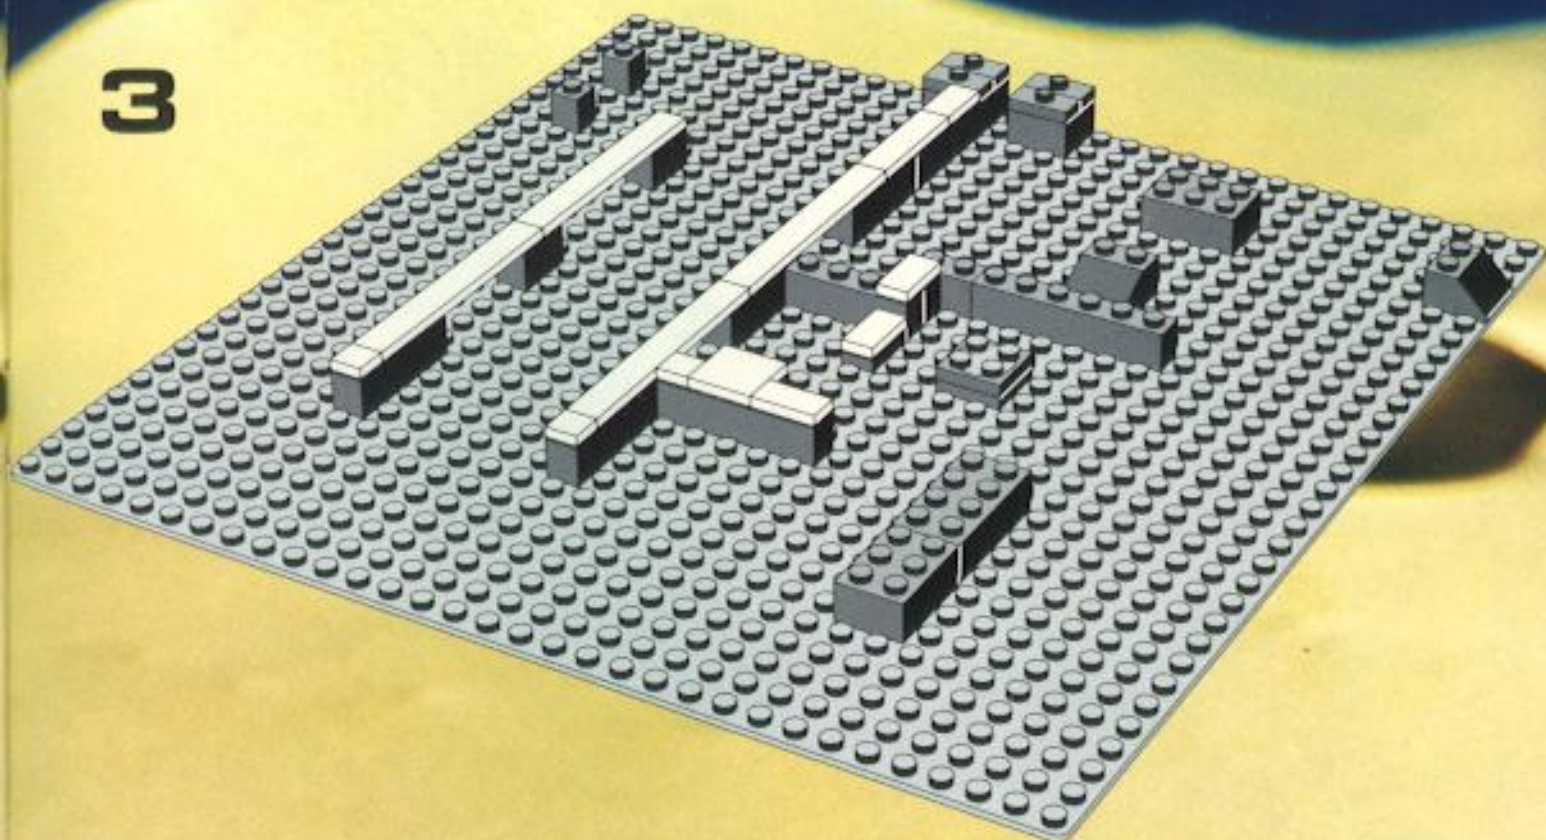 


1




2



 
4

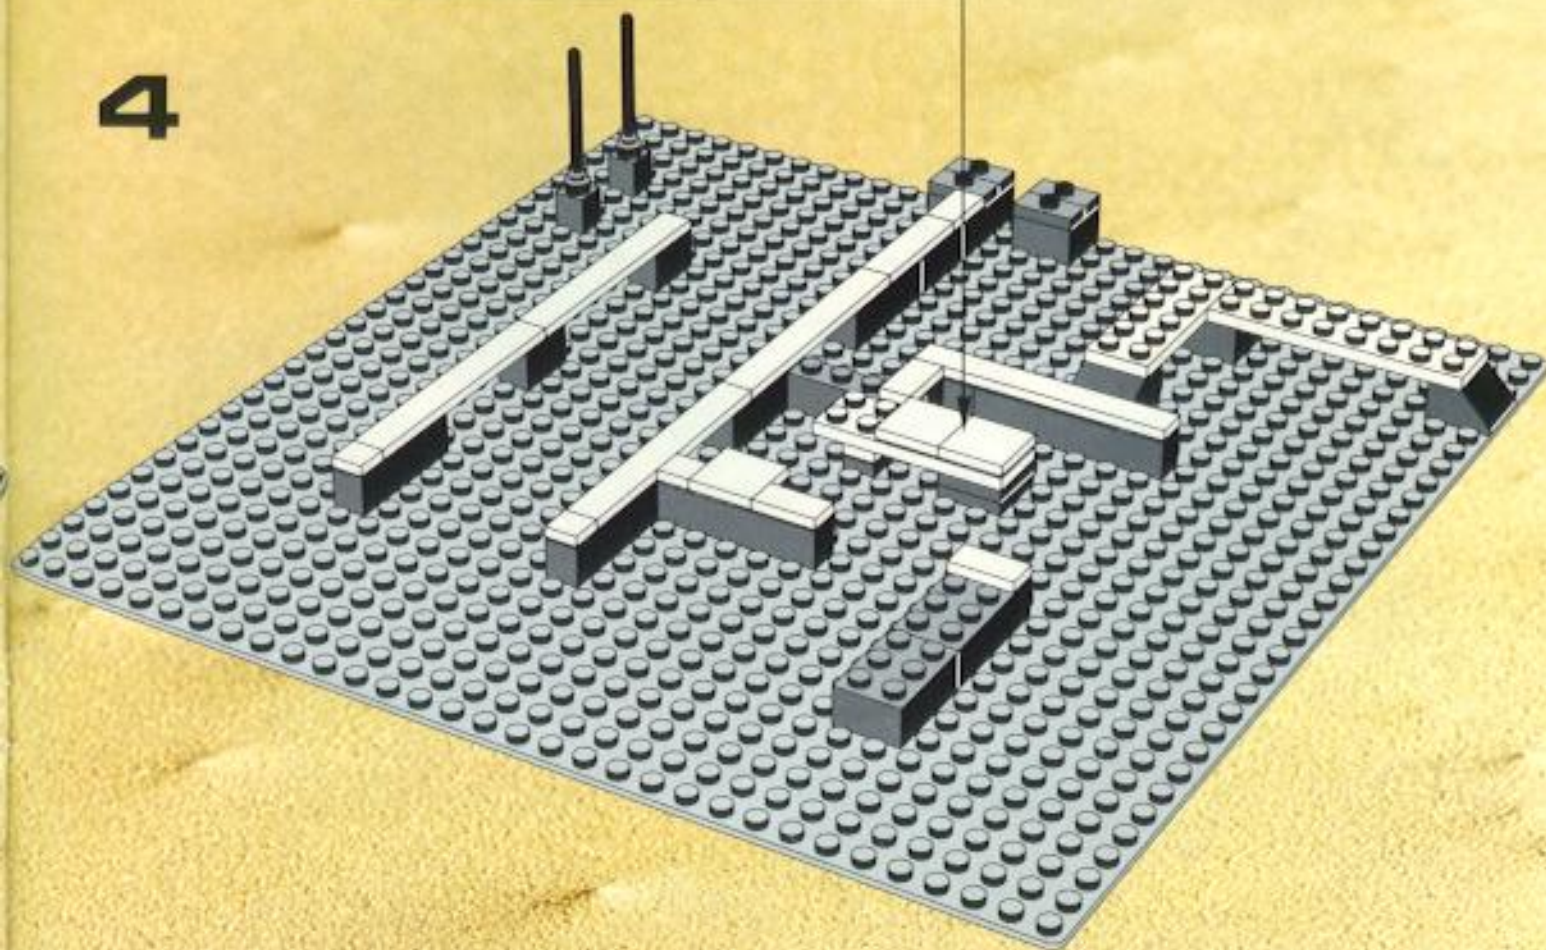


1

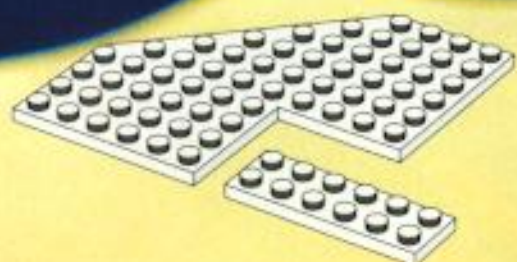 



2

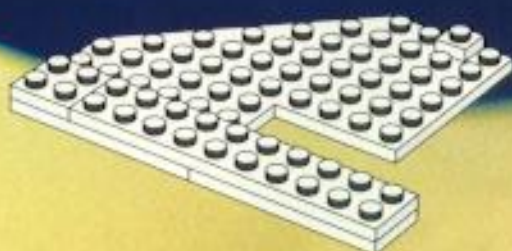 


3

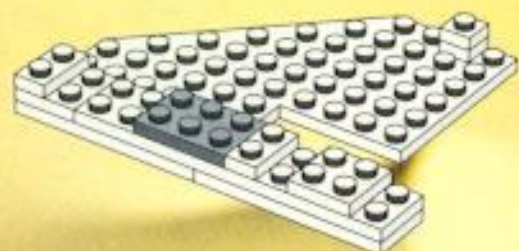 


4

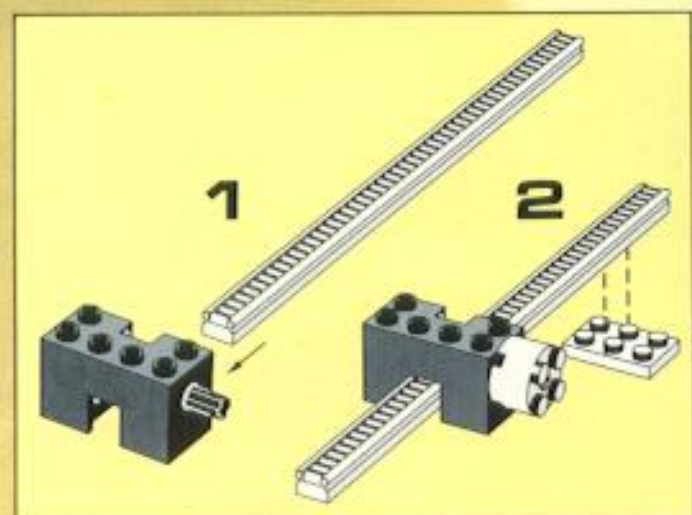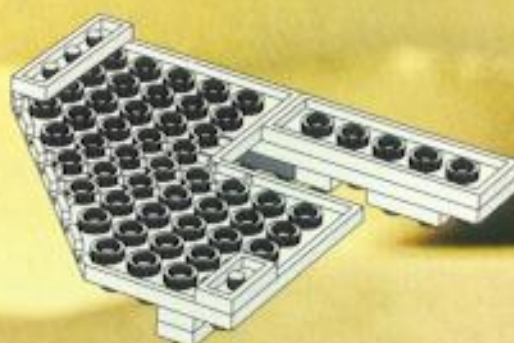  


5

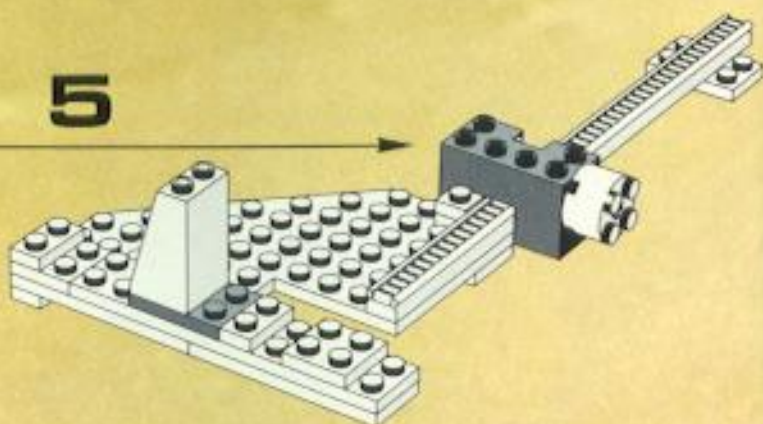 


5

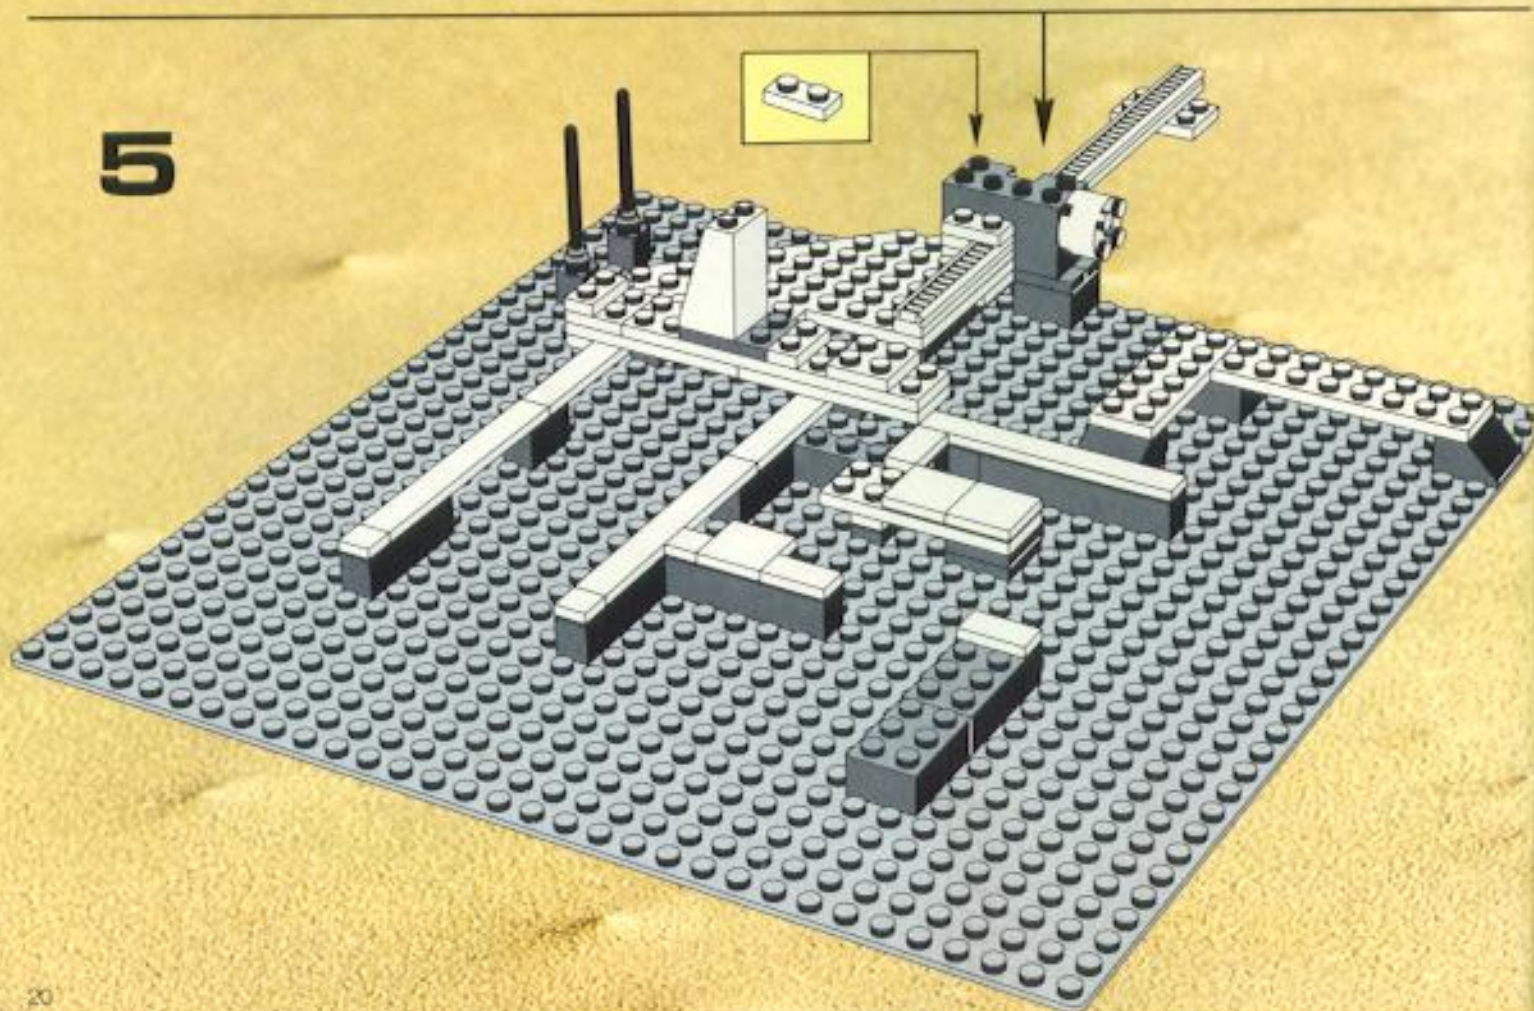 


1

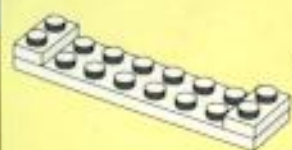 


2

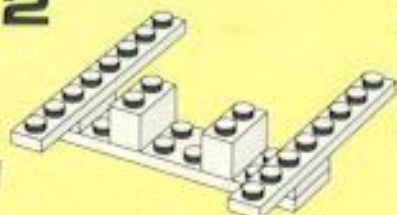 


3

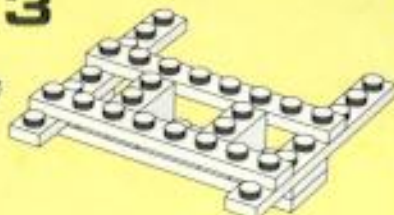 


4

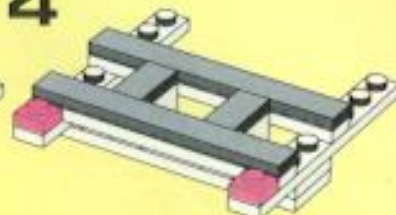 


6

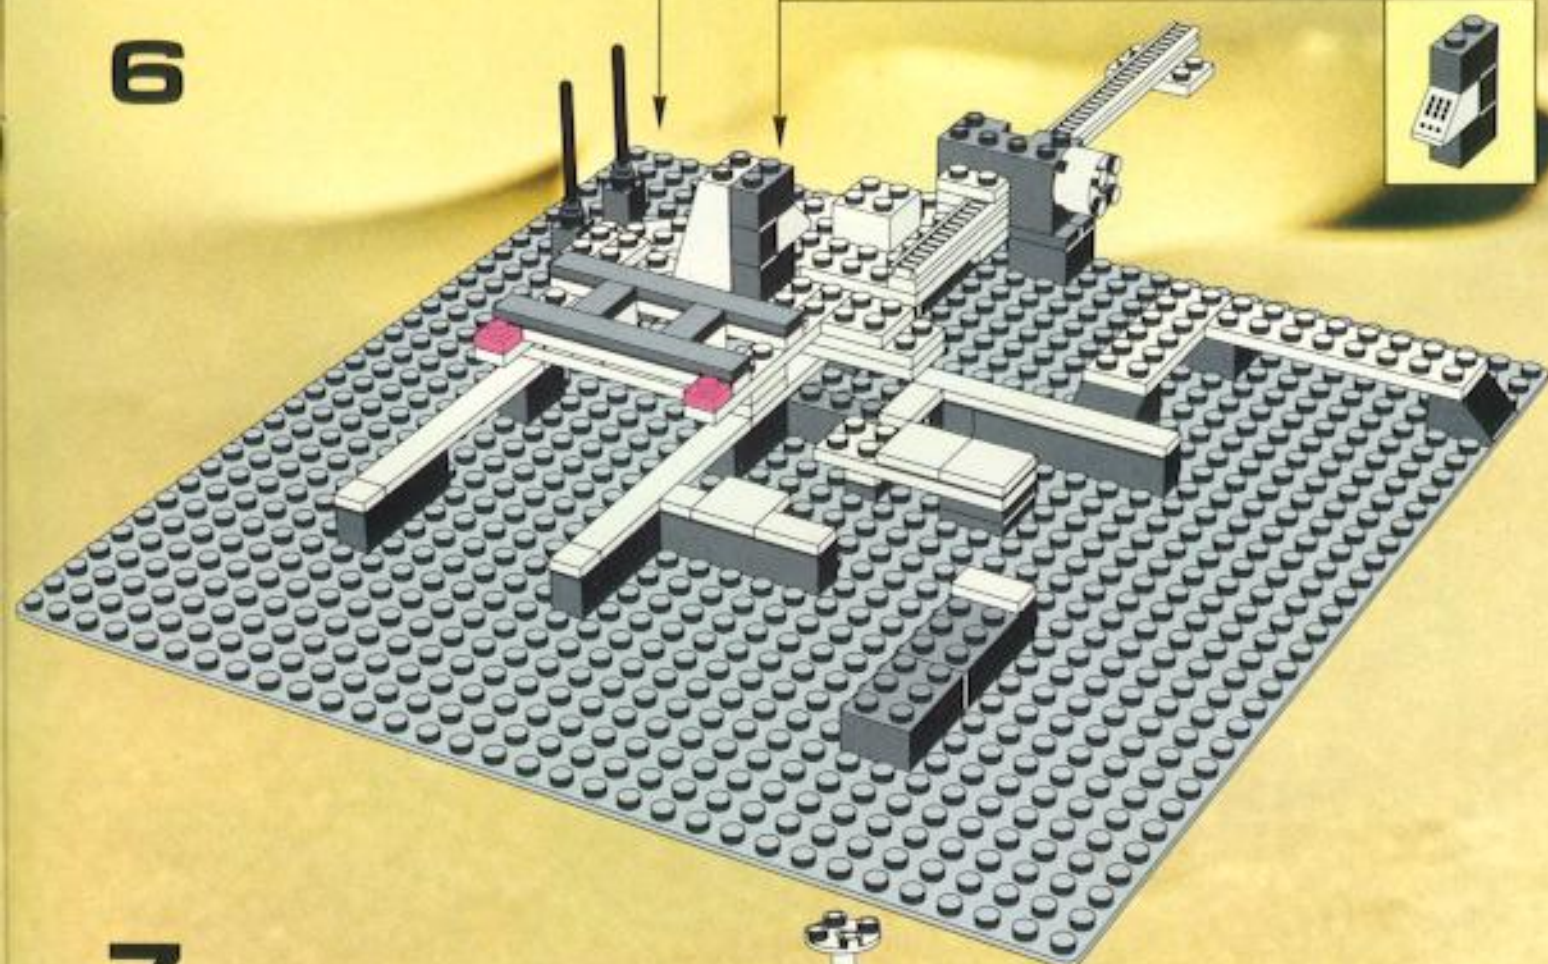 


7

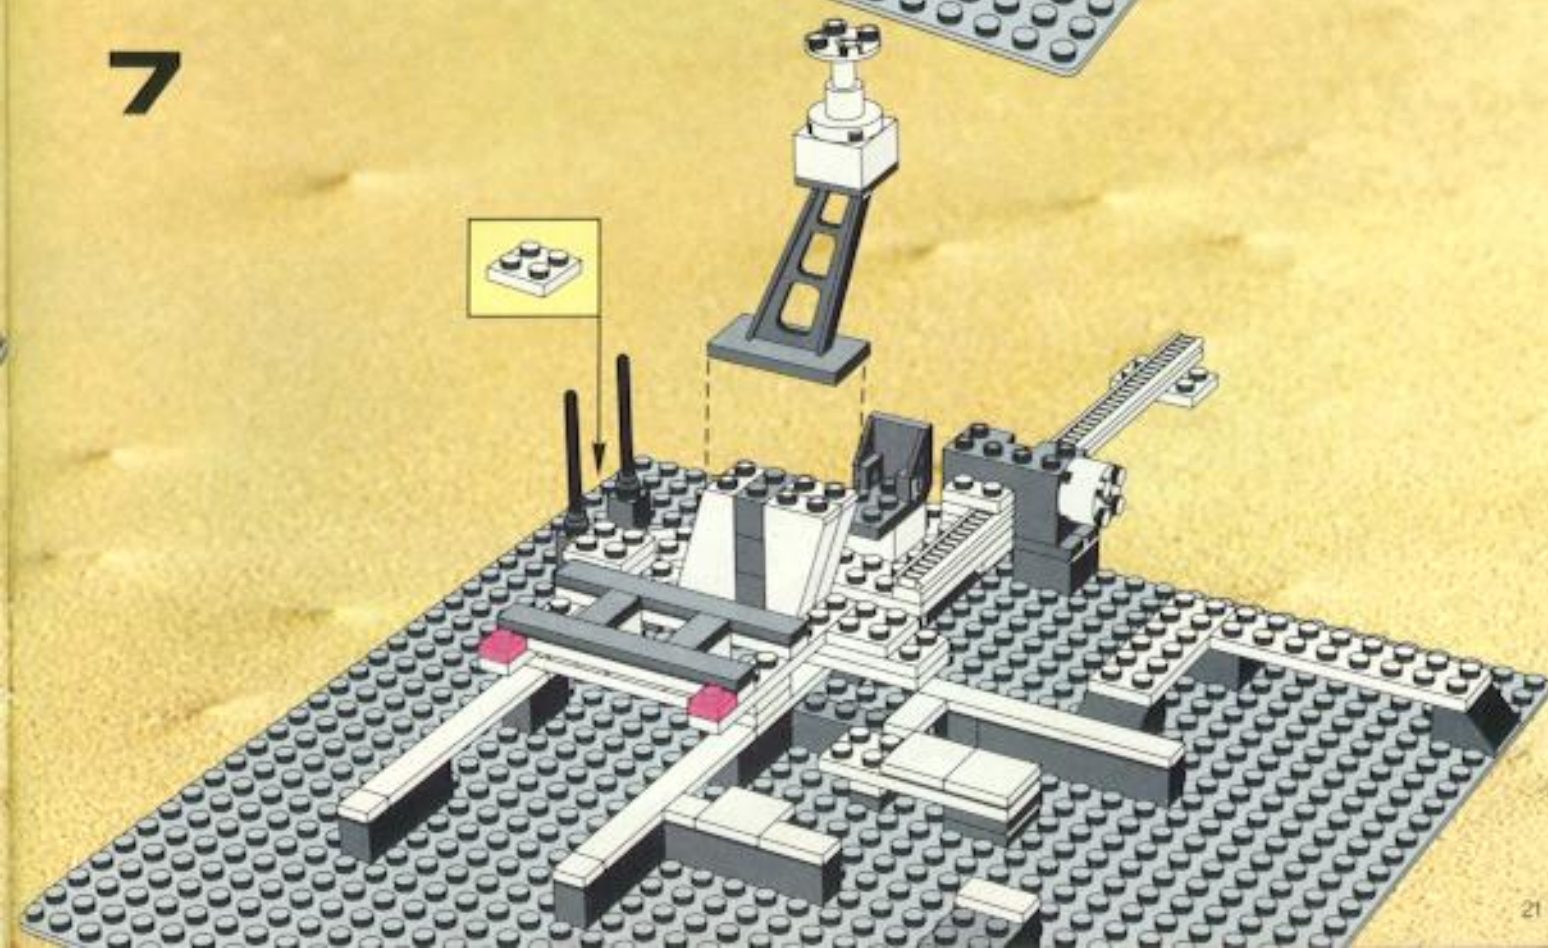 

1

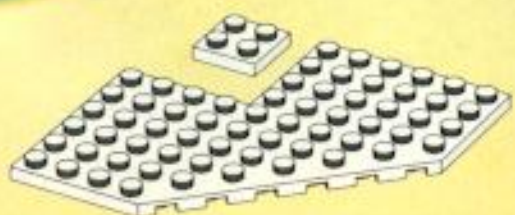 

2

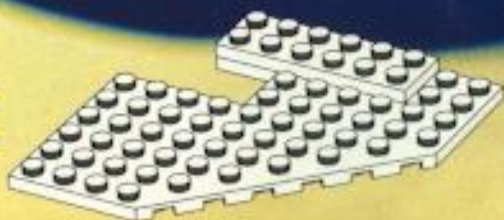 


3



4



 8

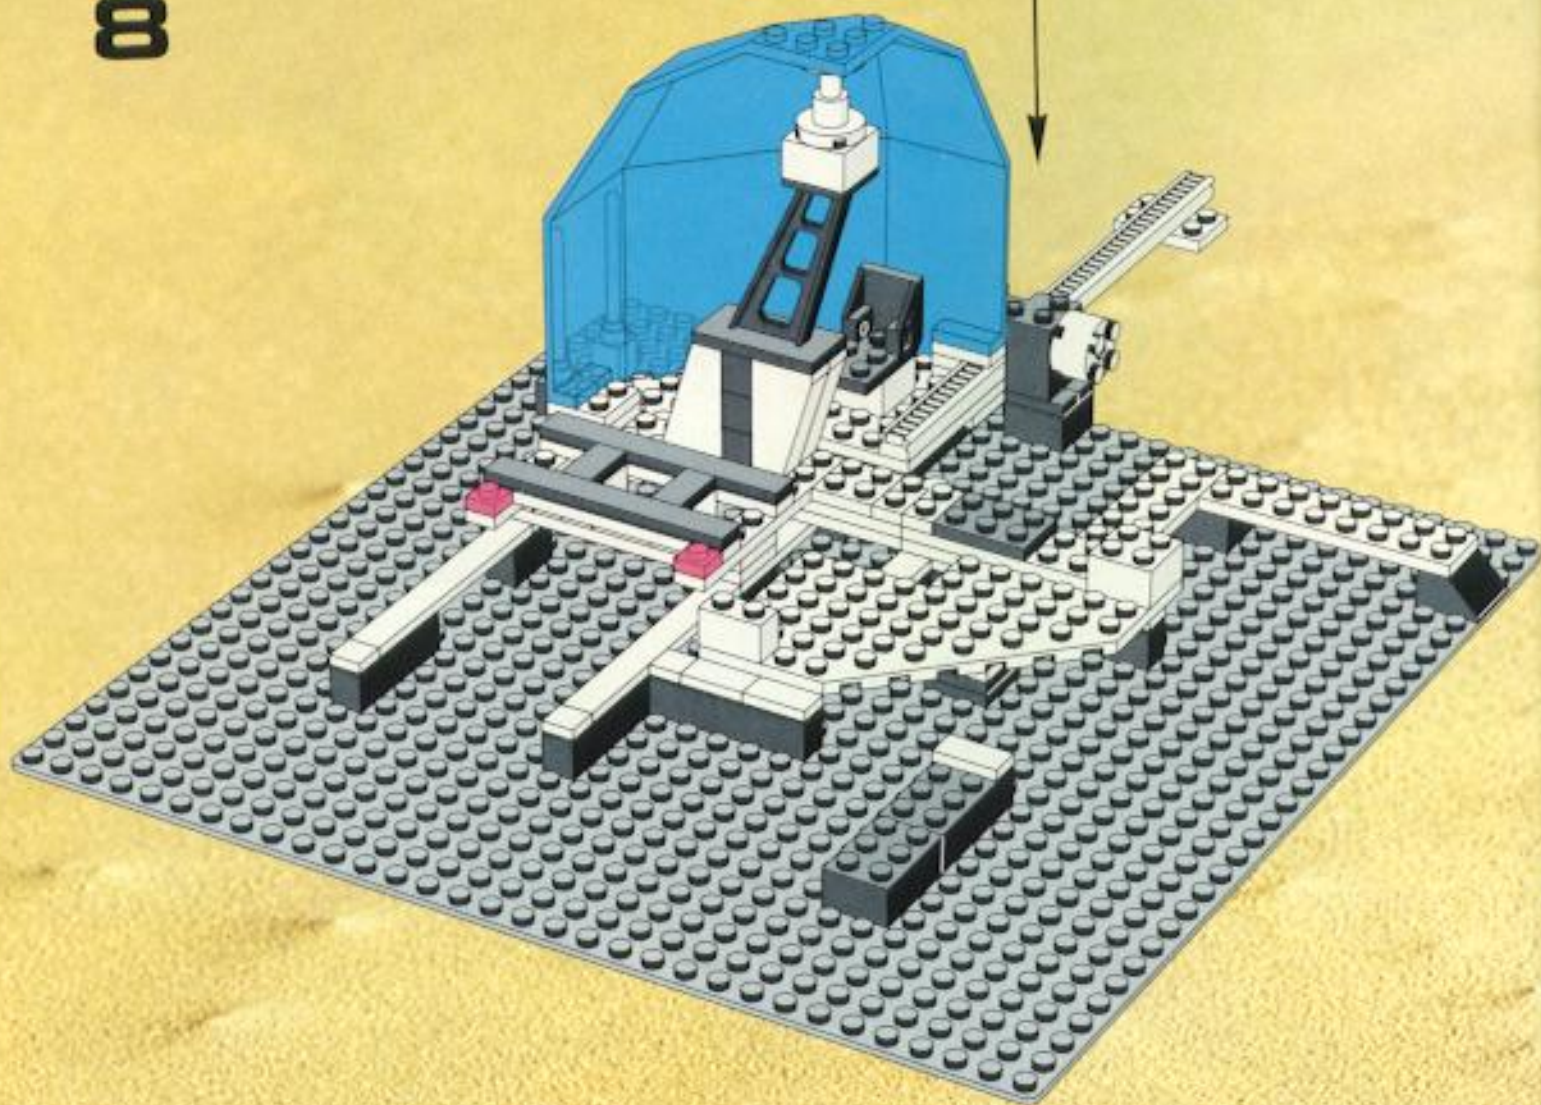

9



10



11

1



2



 
3




4



2x

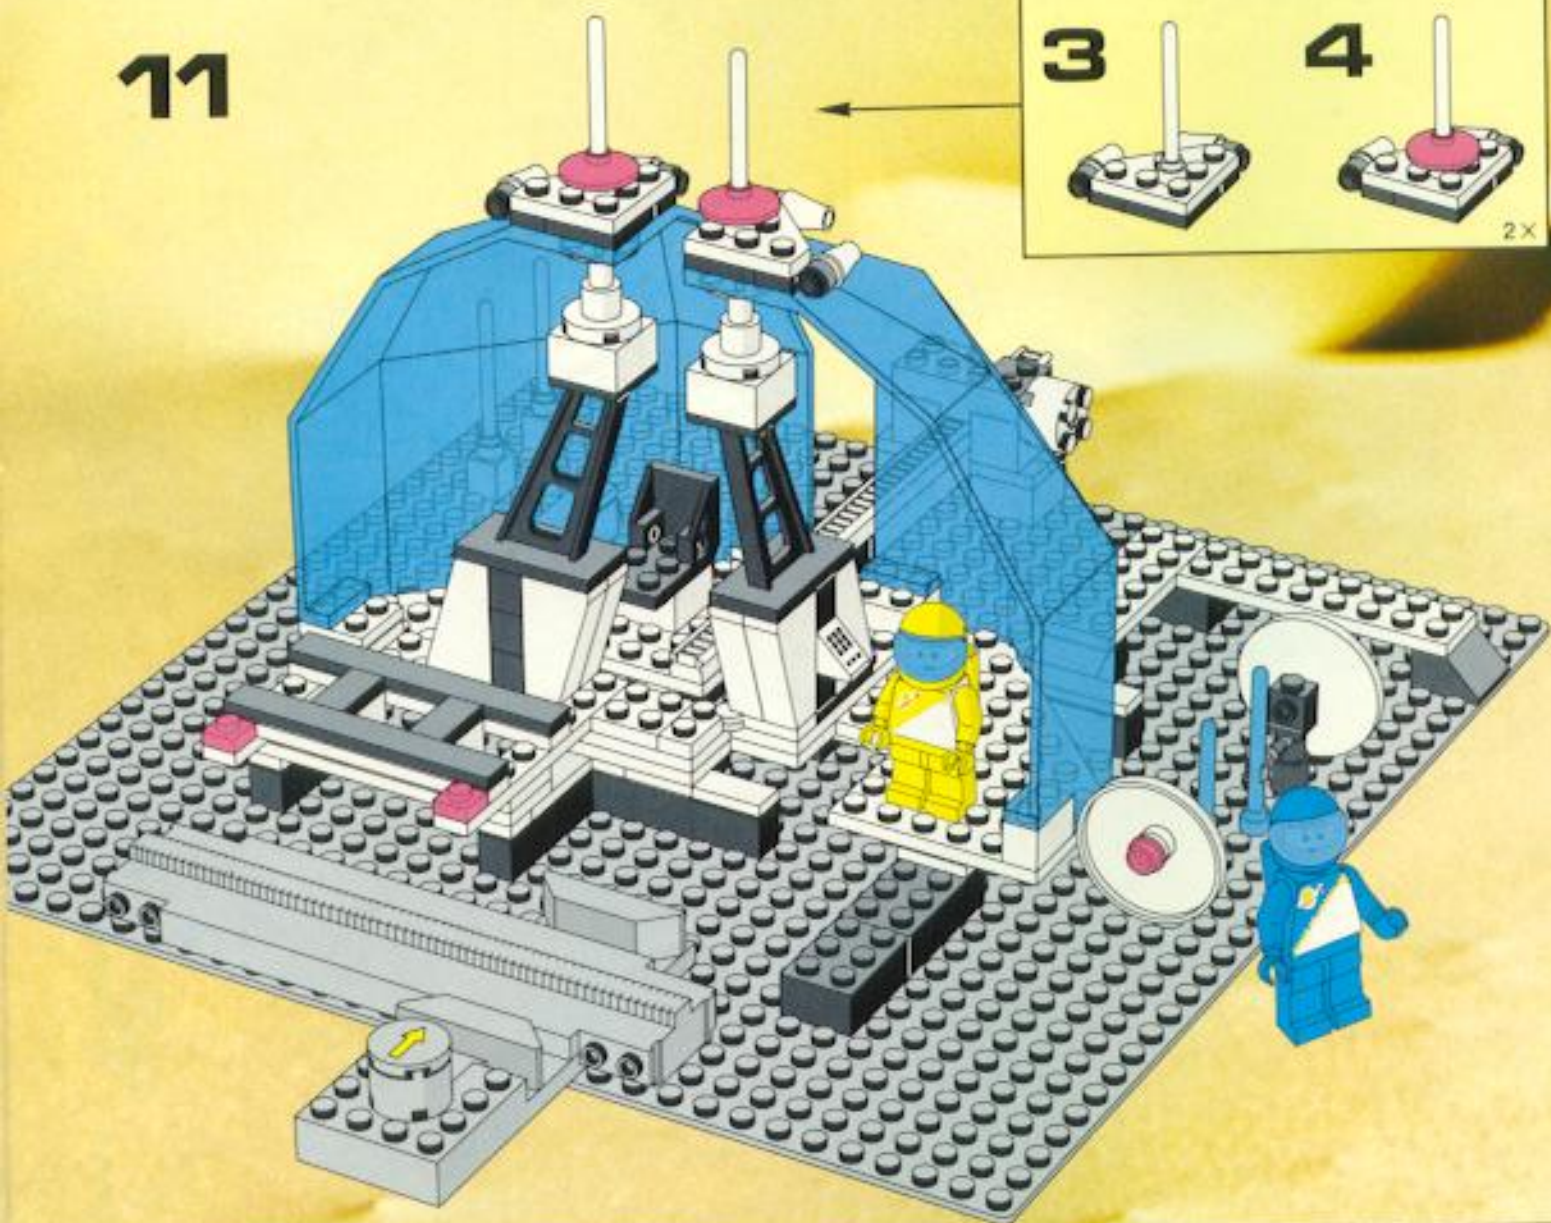

3

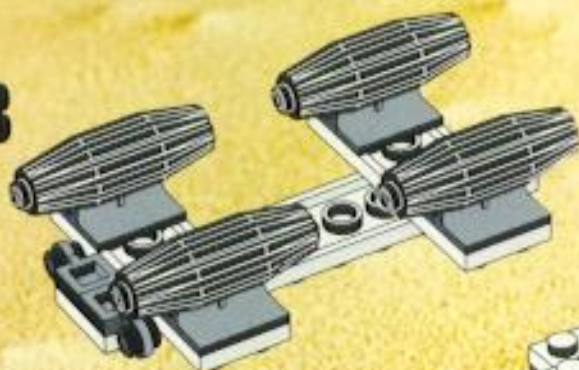 


1




2



 4

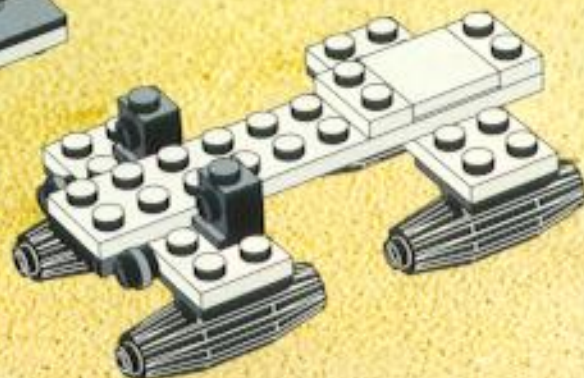


5

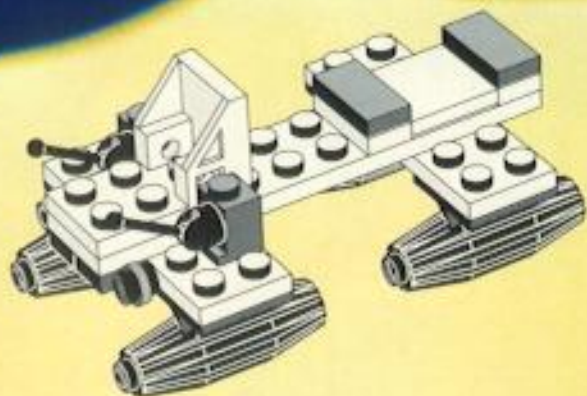 

1



 2

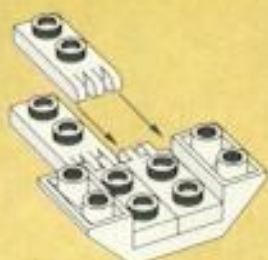


3




4



 5

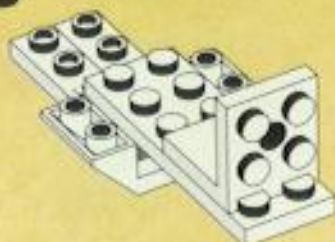


6

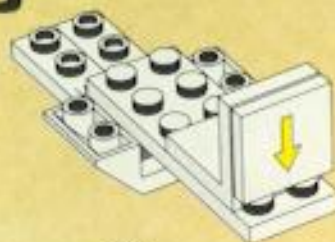 

2x

 6

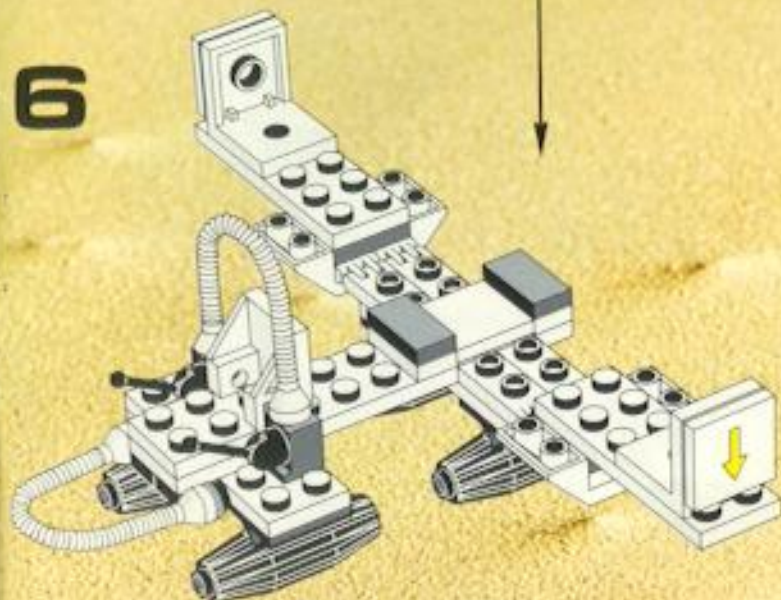


1




2



 
3

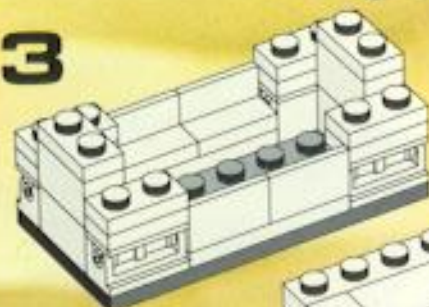


4

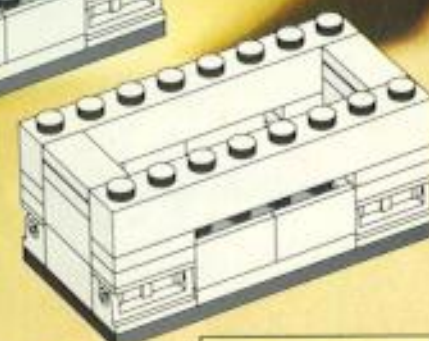 


5

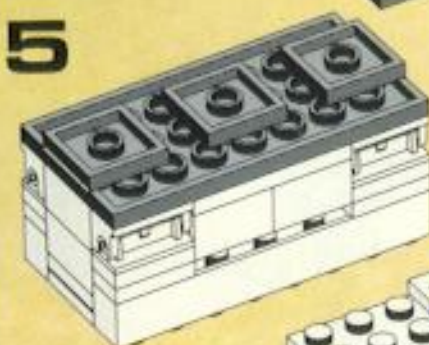 


6


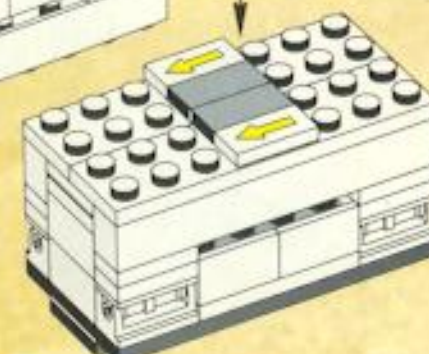 






7

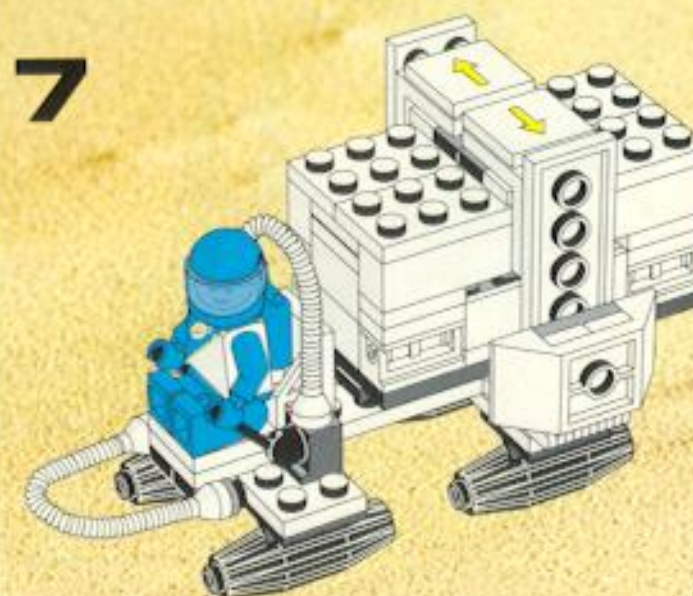 




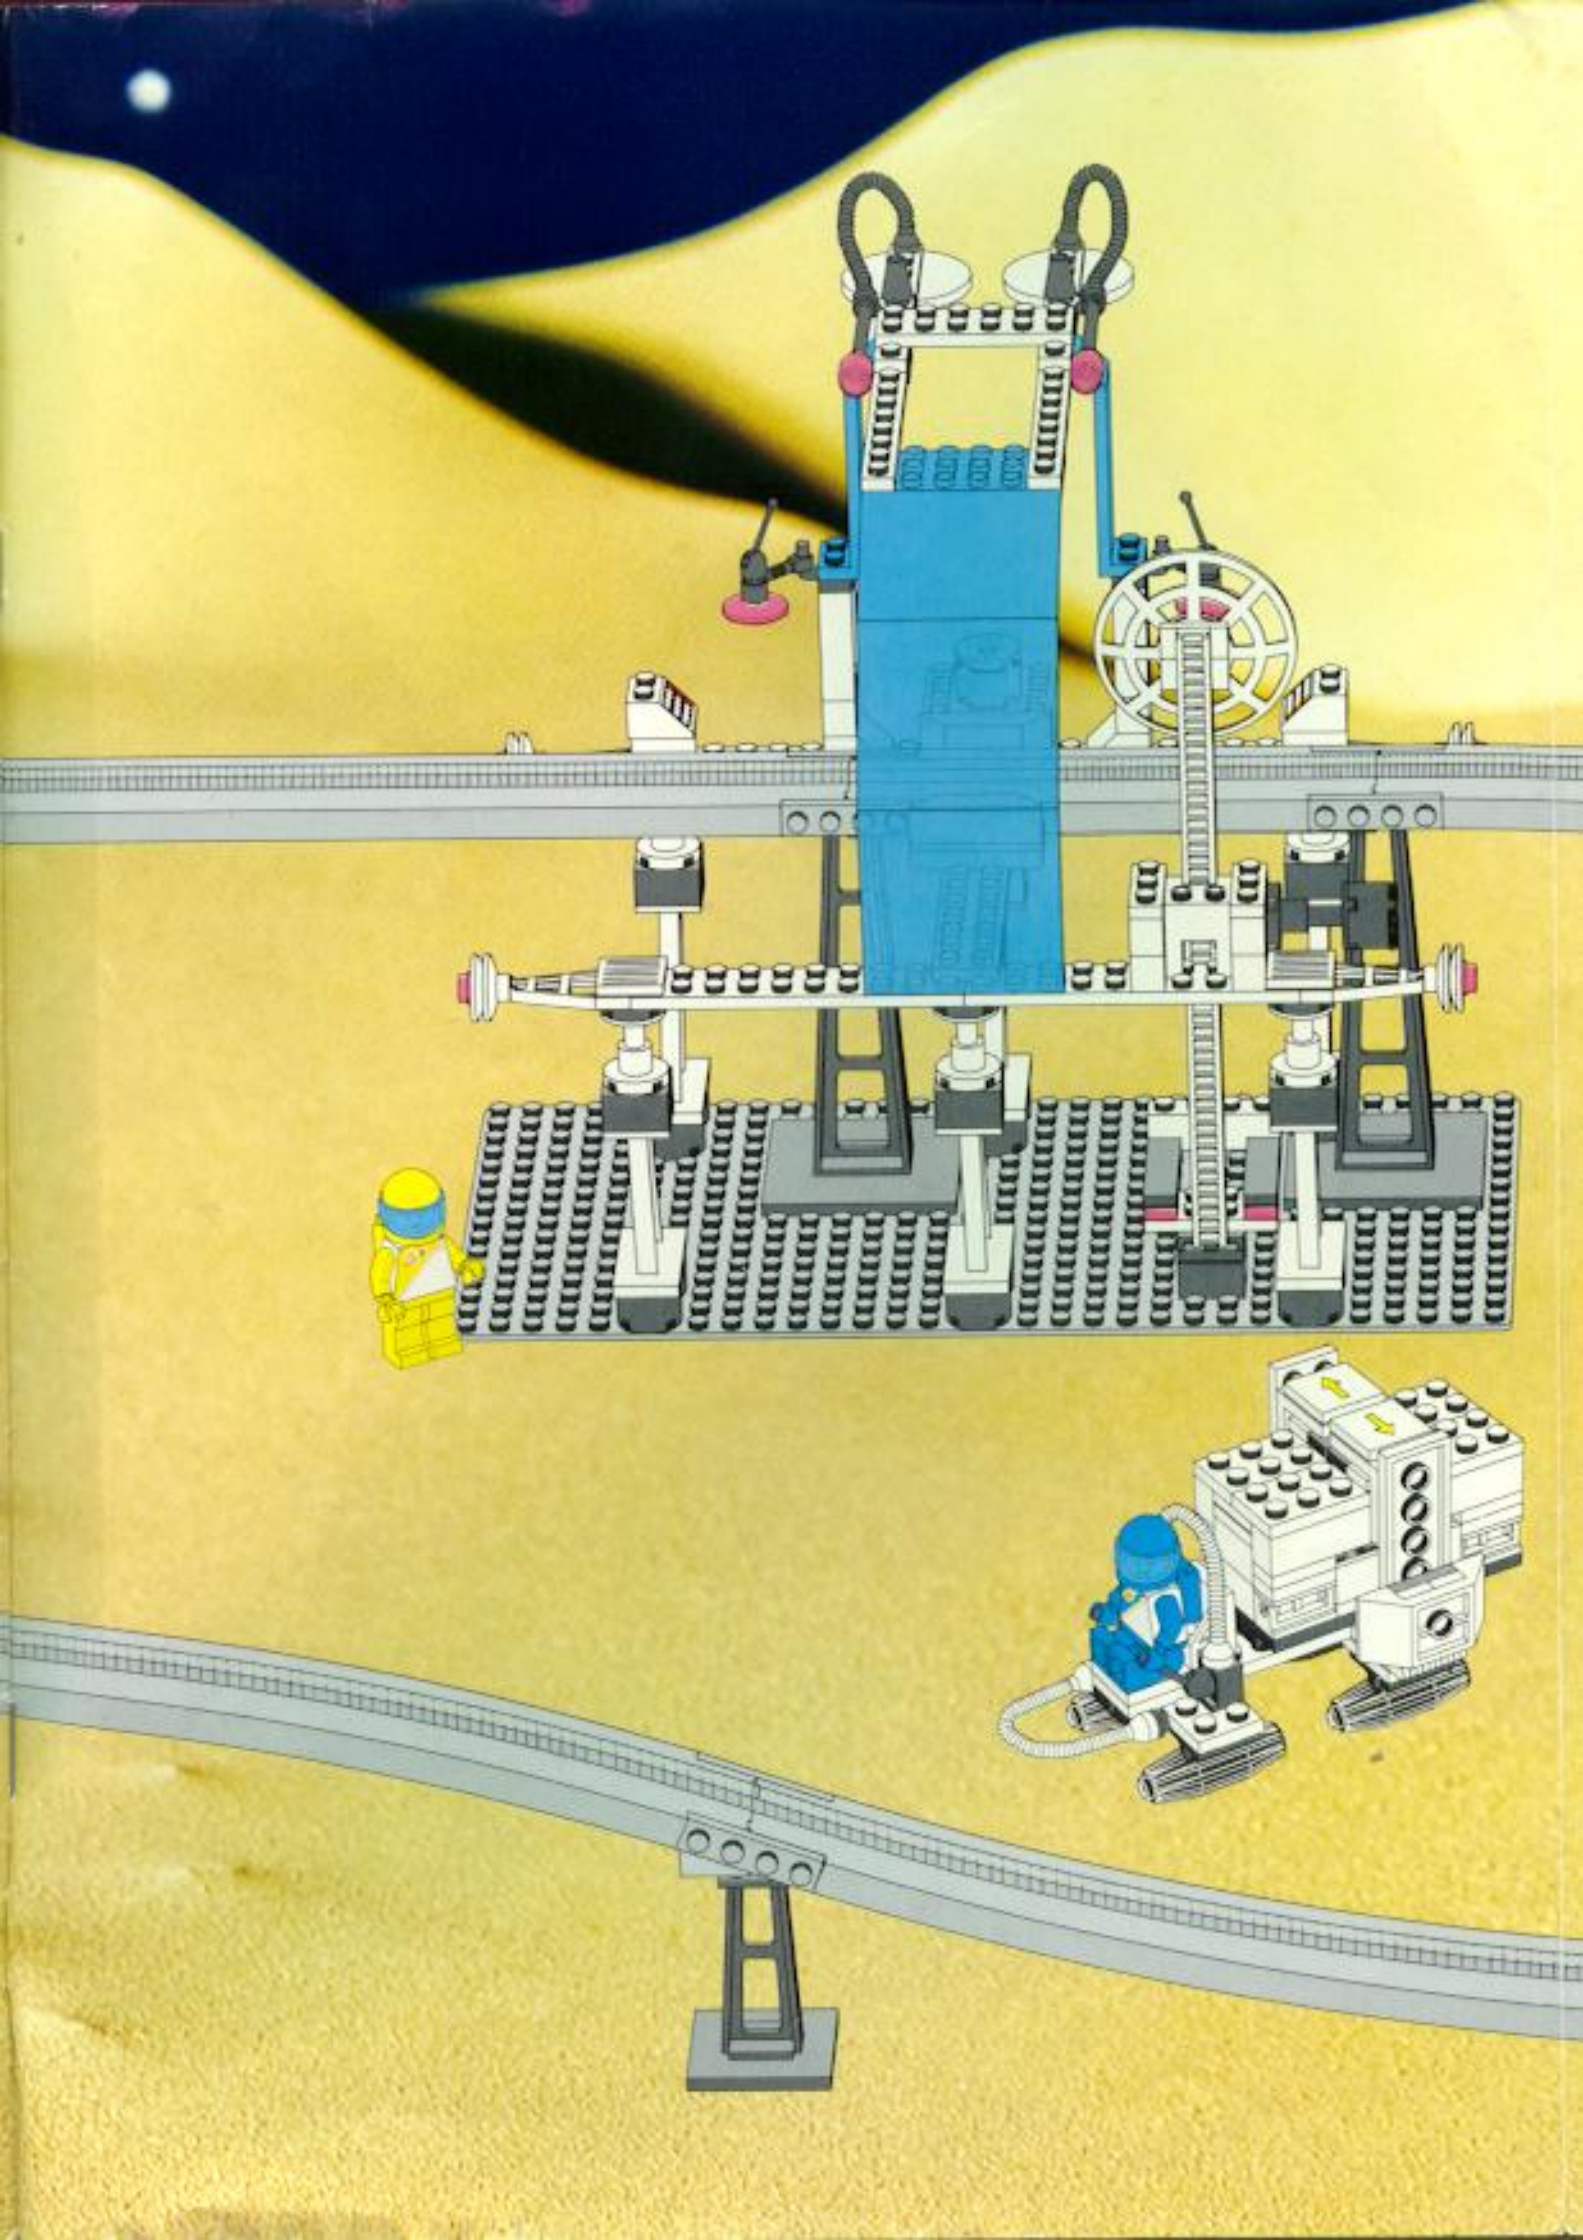 

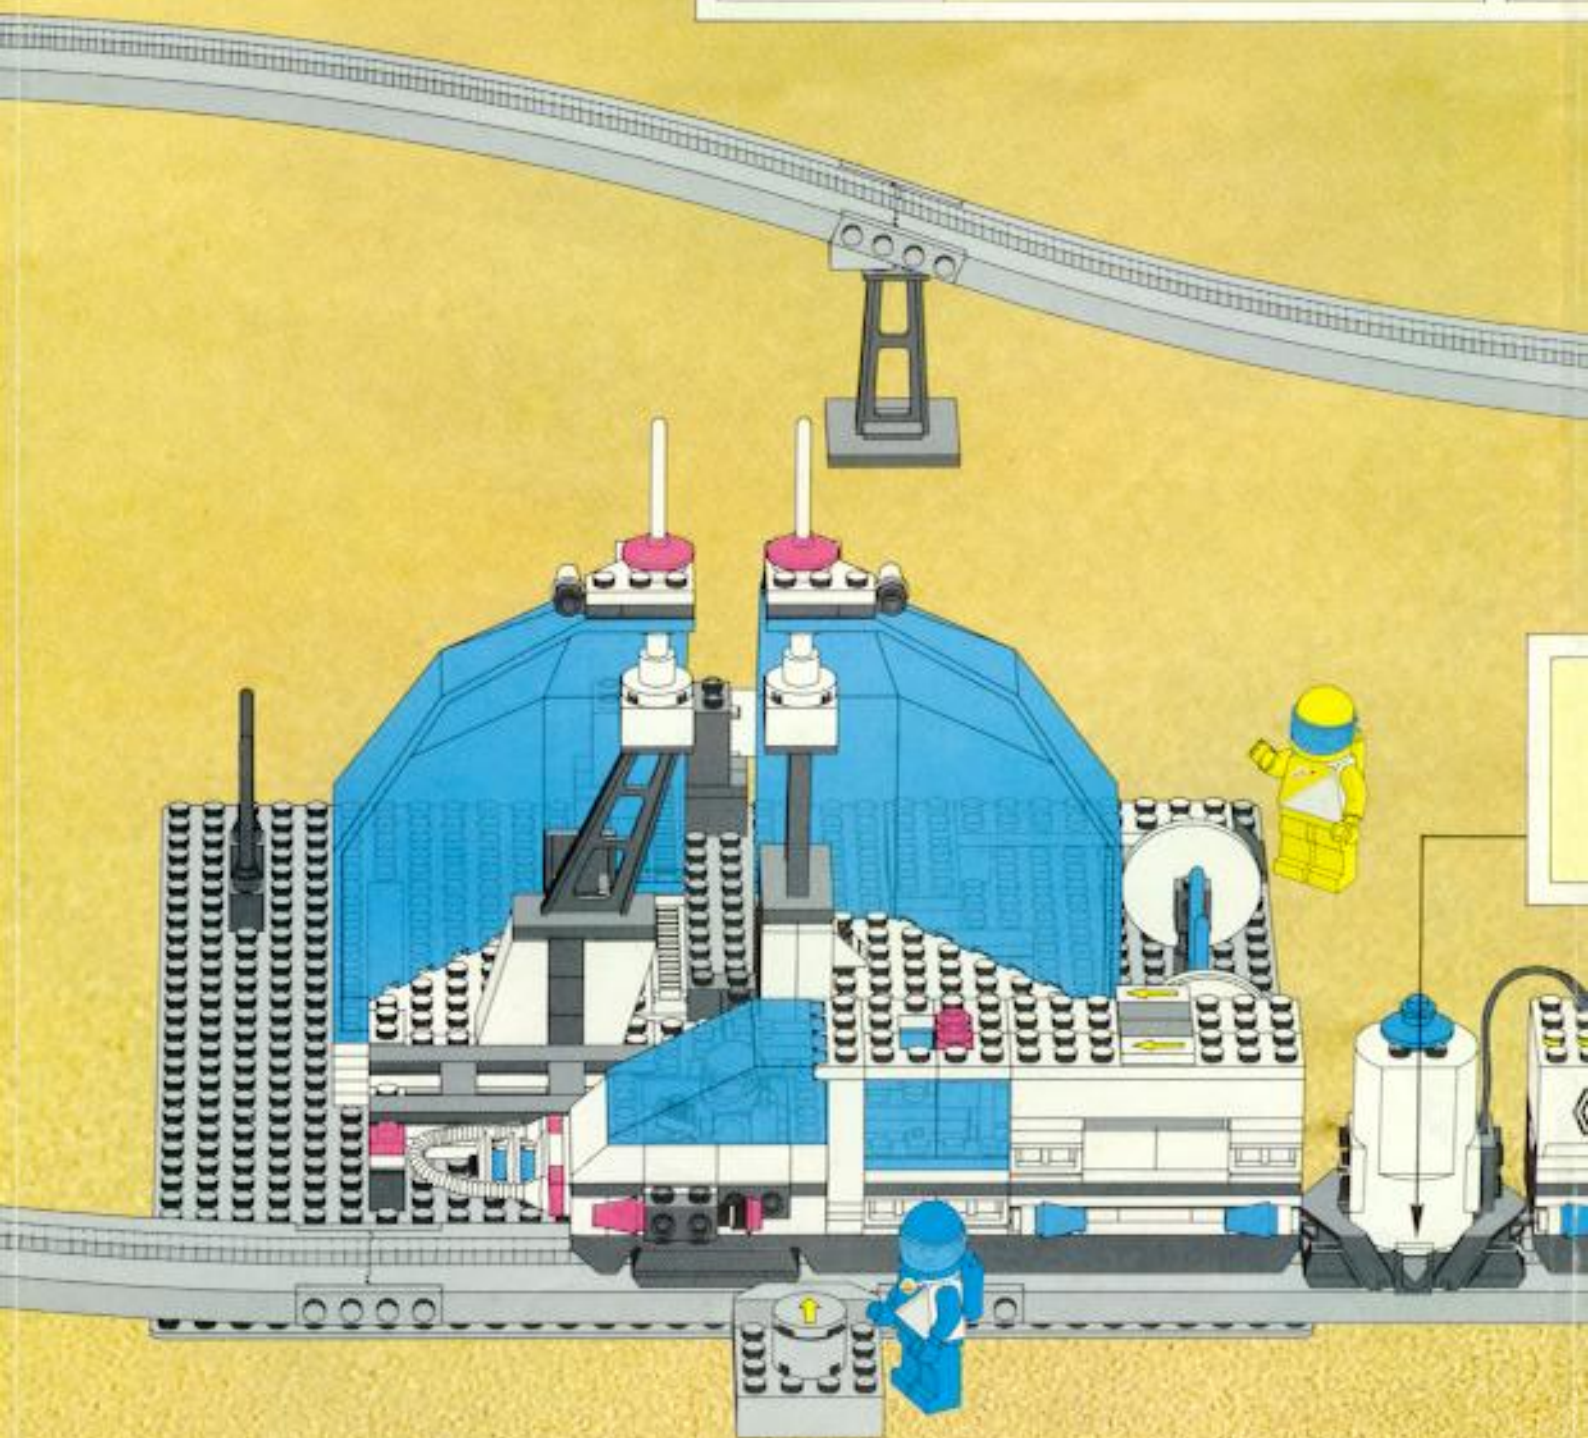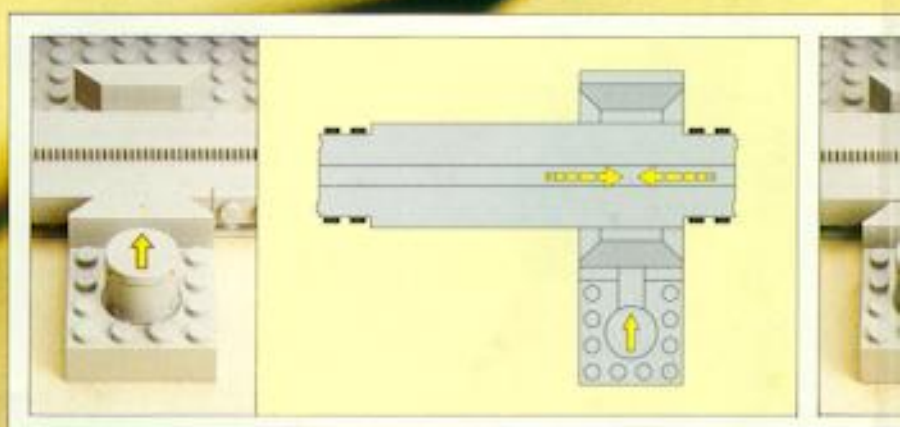  

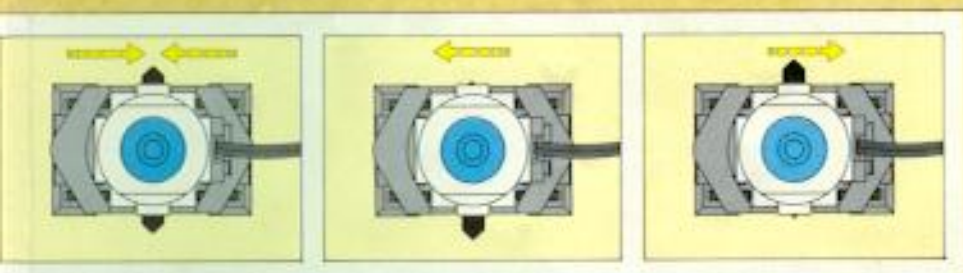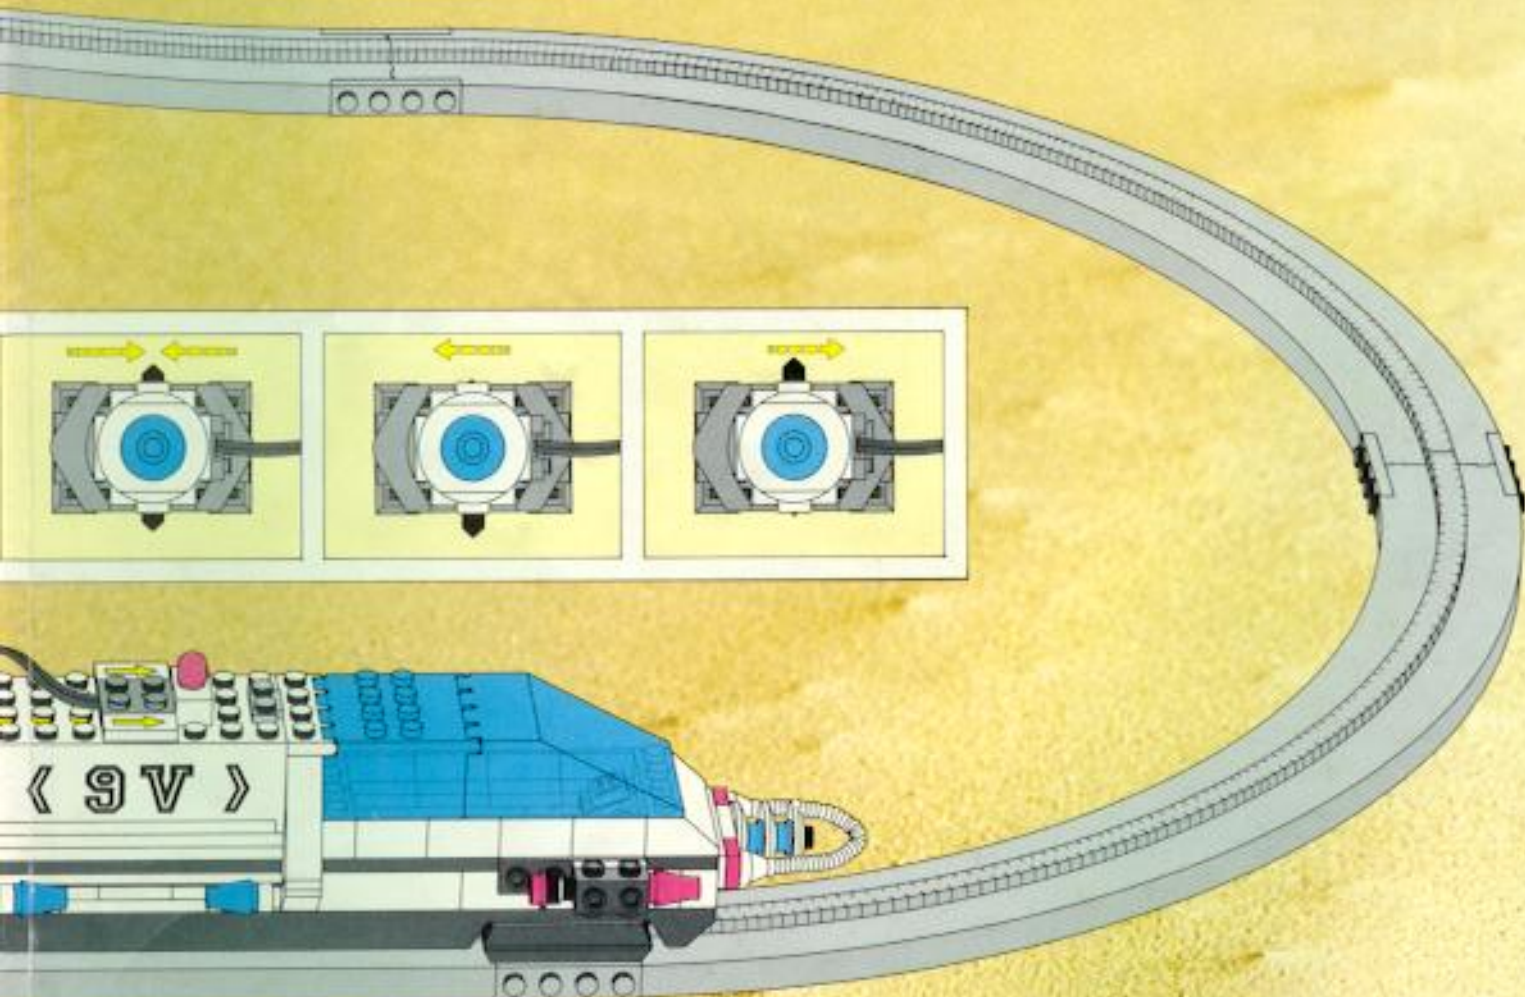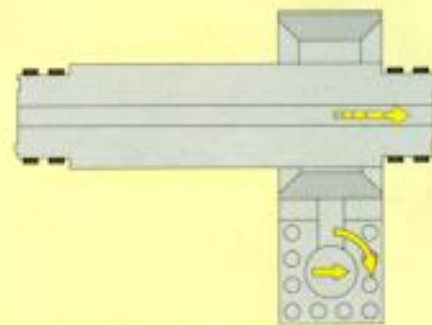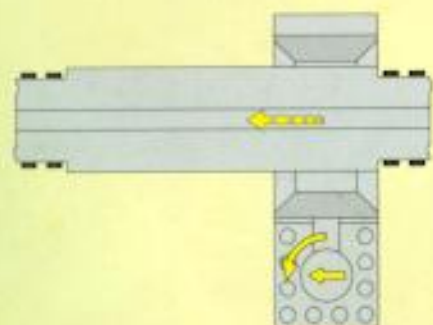     

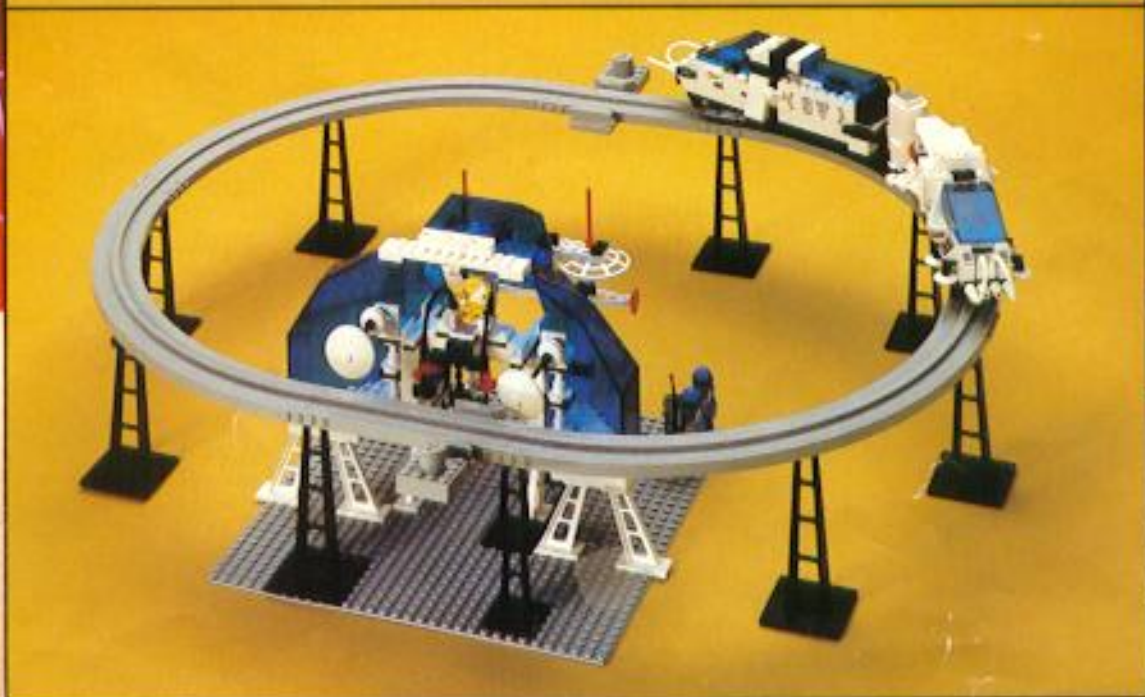

6990

LEGOLAND

LEGO

